2015-20 Chevrolet Colorado Elite Modular Front Runner VGFRG-2124-2126BK Installation Instruction

Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.

Attention

☐ The following symbols are used in this installation instruction.




Relevant matters must be obeyed for safety. Non-compliance may result in injury or other accidents.


Please read carefully and obey strictly.




Relevant matters must be obeyed for the smooth installation and use.

- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive that we are not responsible for any consequences arising from the installation not according to our installation instruction.

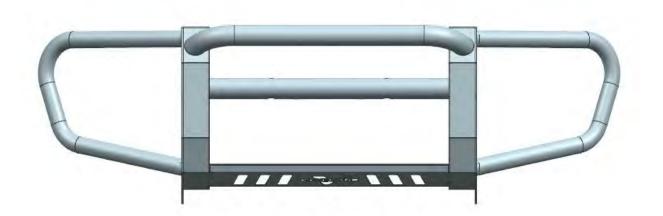

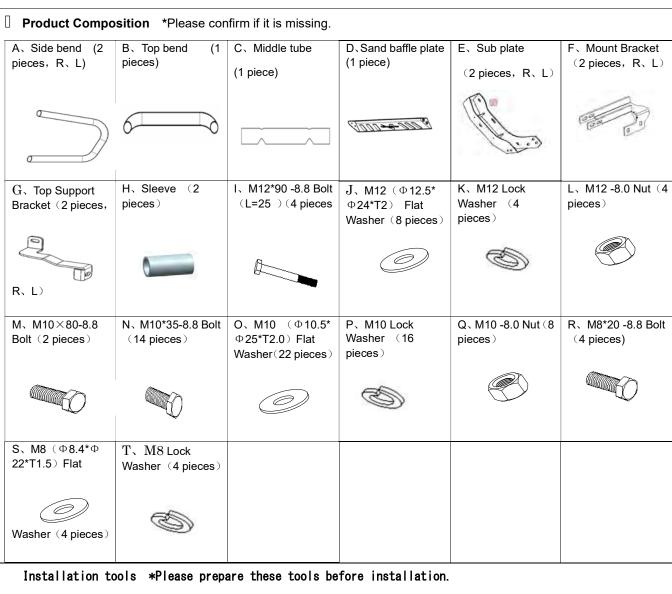



Attentions

- The labels of fitting procedure inside the thick wire frame is particularly important. Pay attention to them in the actual installation.

Pay attention to safety during installation.

Fitting Procedure (The installation process is shown below, Fig1-8)

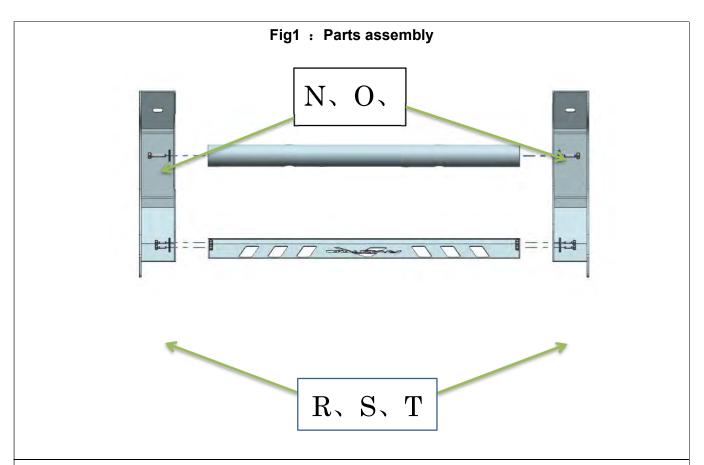


Fig2: Parts assembly

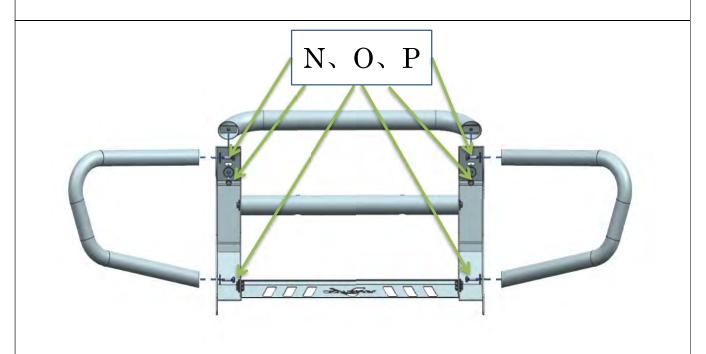
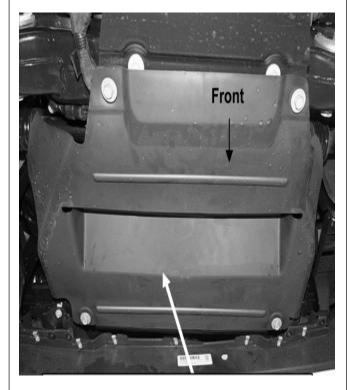


Fig3: Remove splash guard or skid plate from bottom of engine behind bumper

Fig4A: Remove hardware attaching bumper cover to cross member behind bumper



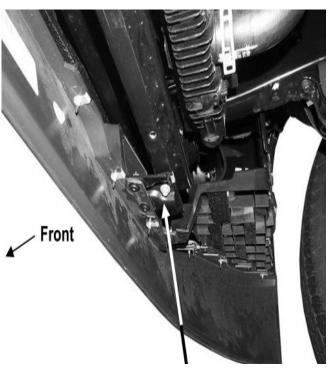


Fig4B: Remove hardware attaching plastic fill panel to inner fender

Fig4C: Remove hardware attaching fender liner to bumper cover

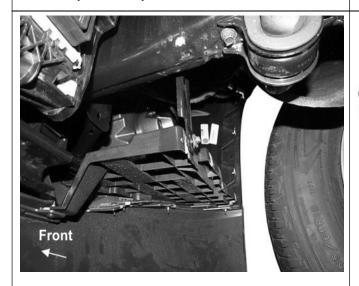


Fig4D:Pull back fender liner to access Bumper hardware and unplug light if equipped



Fig4E:Remove hardware attaching bumper cover to fender. Remove bumper cover

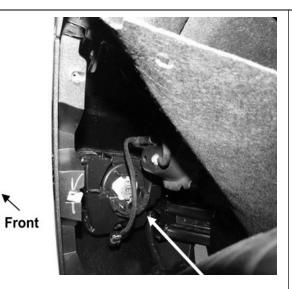


Fig5: Remove factory bolt (arrow).



Fig6:Hold Top Bracket in place to determine area to cut from air deflector

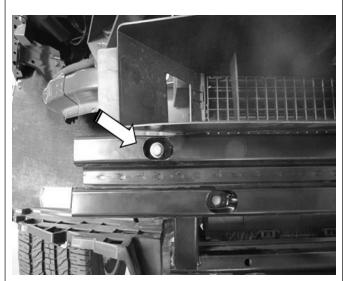
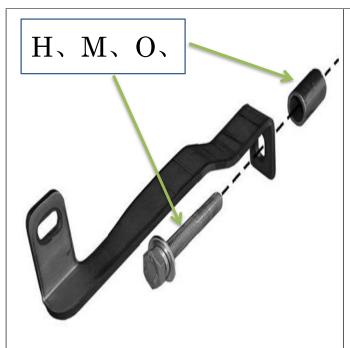


Fig7:Passenger Top Bracket



Fig8: Air deflector cut to clear Top Bracket
(NOTE: Grille Guard installed to align Top Brackets
before tightening 10mm x 80mm Hex Bolts)



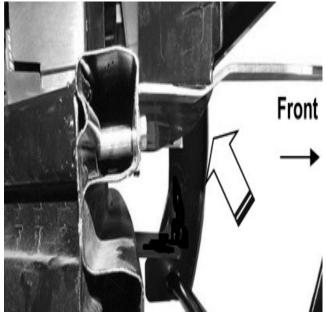


Fig9:Mount Bracket installed Installation Instruction

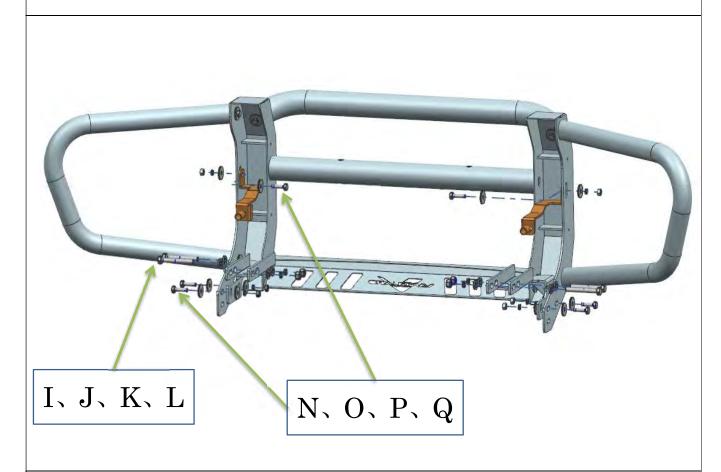


Fig9: Installation complete



TIPS:

- = Routine Maintenance =
- 1) Please use neutral detergent to wet the soft cloth or suede and so on, then clean our product.



- Do not use any hard objects such as brushes. Otherwise, it will cause surface scratches.
- Please protect the product from gasoline, light fuel, fuel oil, brake fuel, engine oil, paint thinner, sulphuric
 acid(battery liquid), wax remover, etc. Otherwise, it will cause product discoloration and dyeing. In case
 product come into contact with above objects, please use neutral detergent to wet the soft cloth or suede and
 so on, then clean our product and wash it with water quickly.