Elite Modular Front Runner

VGFRG-2127-2128BK

Installation Instruction


Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.


Attention


1 The following symbols are used in this installation instruction.

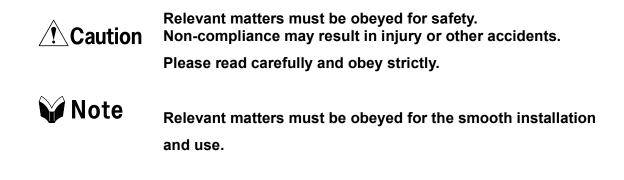



- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive that we are not responsible for any consequences arising from the installation not according to our installation instruction.

Body 1 (2 pieces)	2. Body 2 (1 pieces)	3. Body 3(1 pieces)	4. Body 4(1 pieces)	5. Body 5(2 pieces)
				1
Mount Bracket(2 eces)	7. M10*30 Bolt (14 pieces)	8. M10 Flat Washer (20 pieces)	9. M10 Lock Washer (14 pieces)	10. M10 Bolt(6 pieces)
1、M8*20 (4 pieces)	12、M8 Flat Washer (4 pieces)	13、M8 Lock Washer		
		(4 pieces)		
Attentions				
 The labels of fitting actual installation. 	procedure inside the thick wir	eframe is particularly	important. Pay attentio	on to them in the
- Pay attention to safe	ety during installation.			
	Fitting	Procedure		

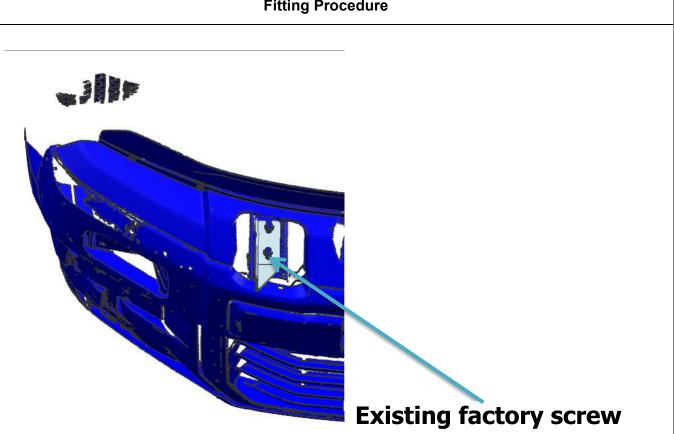

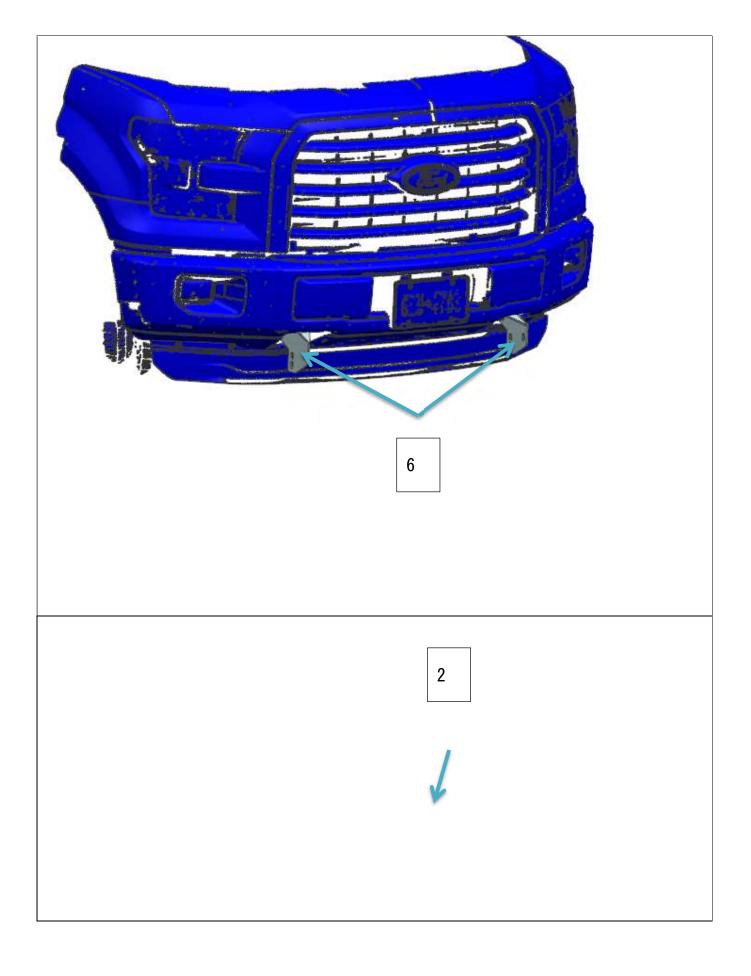

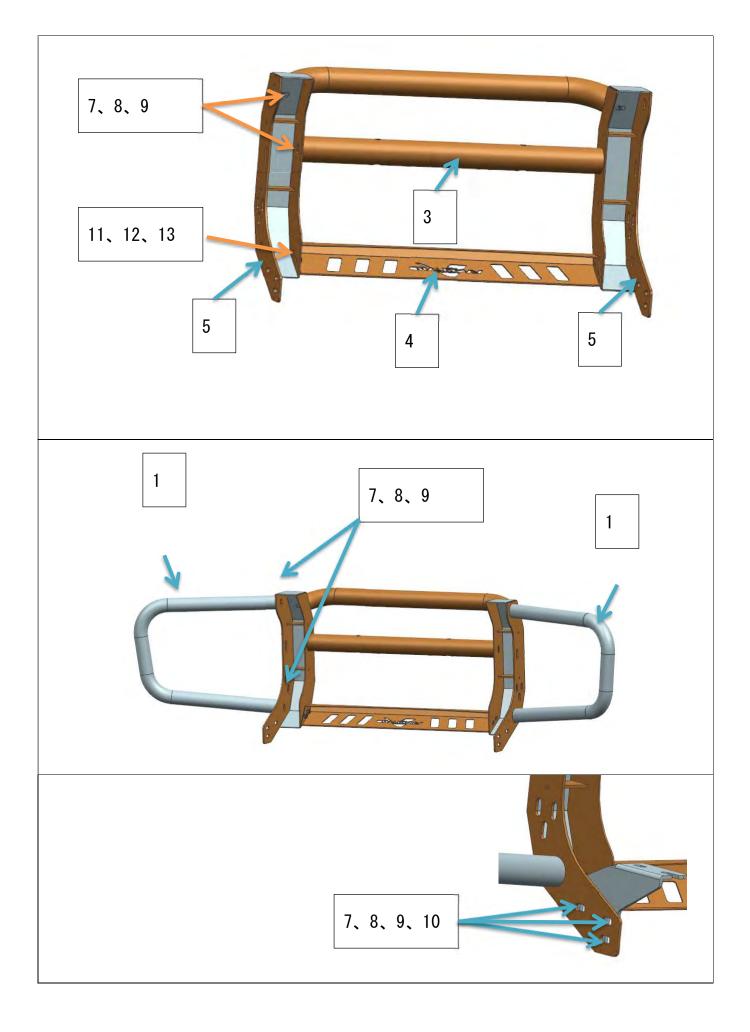

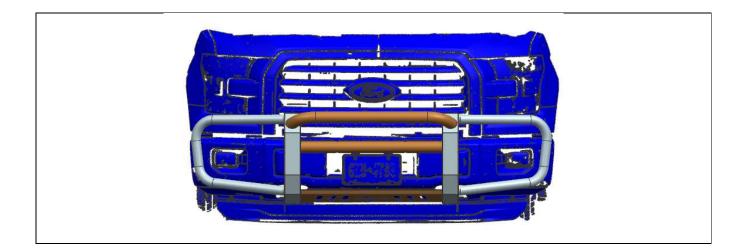

TIPS:

= Routine Maintenance =

1) Please use neutral detergent to wet the soft cloth or suede and so on, then clean our product.

🖌 Note

- Do not use any hard objects such as brushes. Otherwise, it will cause surface scratches.
- Please protect the product from gasoline, light fuel, fuel oil, brake fuel, engine oil, paint thinner, sulphuric acid(battery liquid), wax remover, etc. Otherwise, it will cause product discoloration and dyeing. In case product come into contact with above objects, please use neutral detergent to wet the soft cloth or suede and so on, then clean our product and wash it with water quickly.