# **INSTALLATION INSTRUCTION**

#0453/0665

# Bull Bar or Sport Bar 06-18 Toyota RAV4 , 15-20 Lexus NX200T NX300H





# TAKE NOTE:


- 1) PICTURES HERE ARE ONLY FOR REFERENCE. THE PRODUCT YOU GET MAY BE DIFFERENT FROM THE PICTURE. BUT THE INSTALLING WAY IS THE SAME.
- 2) PLEASE LOOK THROUGH THIS LIST BEFORE INSTALLATION. PLEASE PROTECT YOUR VEHICLE WELL TO AOVID SCRATCHING.
- 3) PLEASE CHECK THE GRILL GUARD TO MAKE SURE THE HARDWARE IS TIGHTENED AND PLEASE CLEAN IT FOR KEEPING SHINNING.

# **SPECIALITY:**

- 1) THOUGHTFUL DESIGN FOR MATCHING YOUR VEHICLE PROPERLY TO SHOW YOUR PERSONALITY.
- 2) NO DRILLING AND EASY INSTALLATION.

# **SPARE PARTS**

NO.	DESCRIPTION	QUANITY	MEASURE	NO.	DESCRIPTION	QUANITY	MEASURE
①	GRILL GUARD	1		5	FLAT WASHER	8	12mm
2	BRACKET L	1		6	SPRING WASHER	4	12mm
3	BRACKET R	1		0	HEX NUT	4	M12
4	HEX BOLT	4	M12X35				

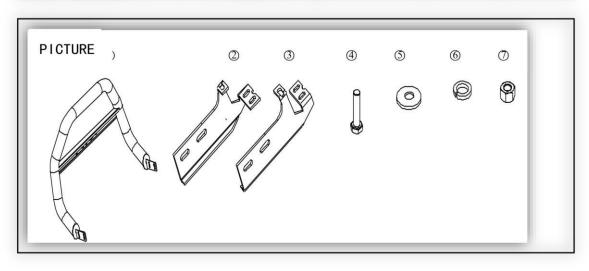


**TOOLS:**TOW 19mm WRENCH.

# **INSTALLING STEP**


STEP ONE: REFER TO THE SPARE PARTS LIST AND DISTINGUISH THE LEFT AND RIGHT BRAKCET. MAKE SURE PARTS ARE OK.

TEP TWO: INSTALL THE BRACKET AS BELOW.

- 1、 REMOVE THE FRONT SKID PLATE. THEN SEE THE ORIGINAL BOLTS AS BELOW.
- 2. REMOVE THE ORIGINAL BOLTS, AND INSTALL THE RIGHT BRACKET ( SAME INSTALLING WAY FOR THE LEFT BRACKET).

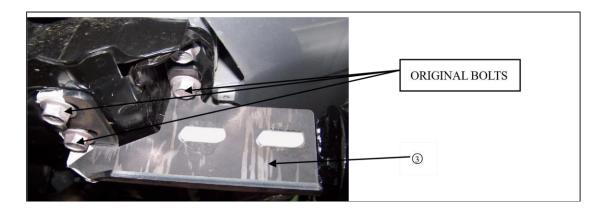

3、INSTALL ① WITH BRACKETS AND TIGHTEN BOLTS. SEE THE PICTURE BELOW.

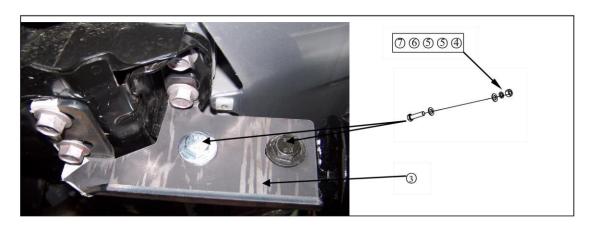

STEP THREE: MAKRE SURE BOLTS ARE TIGHTENED AND THE GRILL GUARD IS FIXING STRONG ENOUGH.

STEP FOUR: FINISH.

**NOTE:** DAMAGE ARISING FROM INCORRECT INSTALLATION AND USAGE IS OUT OF OUR QUALITY.