

Product Installation Guide

Product Name: VGSSB-1224AL for Mercedes GLA

Note: Please read the product manual carefully before installation. Please pay attention to keep the car surface clean and avoid scratching. All pictures in this manual are for reference only. The pictures may differ from the actual ones, but the installation method is the same.

Figure 1: Parts List



Figure 2: Take the left side as an example. Remove the original side beam and expose six holes on the side. Insert the expansion nut at the 2-5 hole position, the 2.3 nut is placed at the front end of the hole, and the 4.5 nut is placed at the rear end of the hole. Remove the black plug and hang the steel hook. T-hooks are hung on the bottom of the middle of the 2.3 hole position and the middle of the 4.5 hole position.

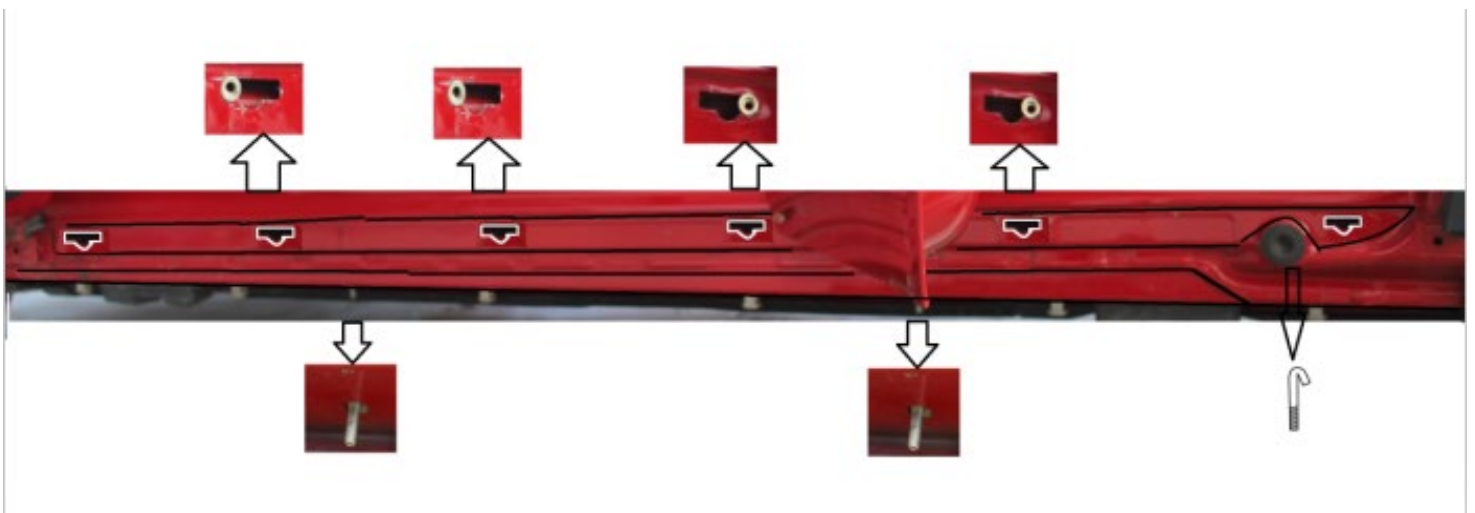


Figure 3: Install the integral aluminum bracket and screw the cross flange screw to the hole. Tighten the side screws first and press the bracket down firmly to secure the bottom screws. Then fix the steel bar hook to the aluminum bracket.



Figure 4: Attach the pedal to the plastic part of the pedal, install the pedal, and cover the plastic cover. The installation is complete.

