
PART LIST:			
QTY	PART DESCRIPTION	QTY	PART DESCRIPTION
1	Rear Guard	8	12mm ID x 30mm OD Flat Washers
1	Driver side/Left Moutting Bracket	4	12mm Lock Washers
1	Passenger side/Right Moutting Bracket	4	12mm Hex Nuts
4	12mm x 30mm Hex bolts		

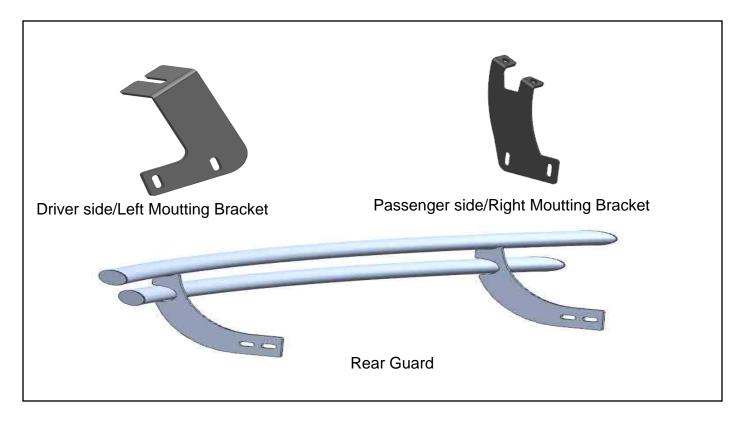

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

Install Time: 30 – 60 Minutes; Professional Installation

INSTALLATION PROCEDURE

- 1. Please prepare the tools for installation, follow as: 12-14,17-19 wrench.
- 2. Put the mount bracket into the girder of the car, and tighten it with factory bolts and falt washers.

- 3. Install the Rear Guard on the mount bracket ,and tighten it with 12mm Bolts Flat Washers , Lock Washers and Nuts.
- 4. Installation is finished.

Installation picture



Passenger Side





Page 2 of 2