# **INSTALLATION MANUAL**

#### PRODUCT NAME: Front Bumper for 21+ Ford Bronco

## 1、NOTICE:

- For the convenience of installation, please read the goods manual carefully before installation; When installation, please pay attention to protect your car's surface, and avoid scratches.
- Please check all the accessories connected to the car whether loose or not, and ensure the security. Clean the side bar regular to keep it clean.
- All the pictures in this manual are only for reference, the picture and material object may have different, but the installation method is the same.

### 2, PART LIST


NO.	Description	QTY	SIZE	NO.	Description	QTY	SIZE
1	Bar	1	De manten de la	7	Bracket(right)	1	Ą
2	Middle Plate	1	and a second sec	8	Radar Bracket	4	
3	Guardrail	1		9	ACC Bracket	1	
4	Winch Frame	1		0	Lamp grill 1	1	
5	Bracket(up)	1			Lamp grill 2	2	
6	Bracket(left)	1	F				
REMARK: The same installation for both bracket							


NO.	Description	QTY	SIZE	NO.	Description	QTY	SIZE
A,	Hardware 1	1		6	Hex Bolt	8	M12*50
02	Hex Bolt	5	M10*35	0	Hex Bolt	8	M12*40
03	Flat Washer	10	D10*30	(13	Flat Washer	32	D12*30


0	Spring Washer	5	D10	(19	Spring Washer	16	D12
(15	Hex Nut	5	M10	0	Hex Nut	16	M12


NO.	Description	QTY	SIZE	NO.	Description	QTY	SIZE
Β,	Hardware 2	1		26	Hexagon head flange toothed nut	4	M8
2	Hex Bolt	2	M10*25*1.25	Ø	Hexagon Socket Head Bolt	24	M6*16
22	Flat Washer	2	D10*30	28	Flat Washer	12	D6*18
23	Spring Washer	2	D10	29	Hexagon head flange toothed nut	20	M6
24	Hexagon Socket Head Bolt	4	M8*20	80	Caliper Nut	4	M6
25	Flat Washer	4	D8*20				


# 3、INSTALLATION MAP

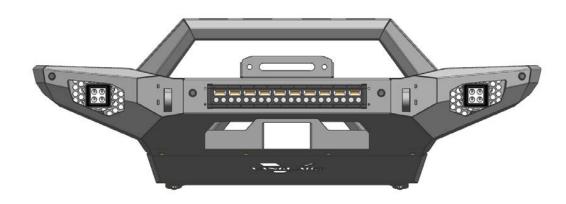

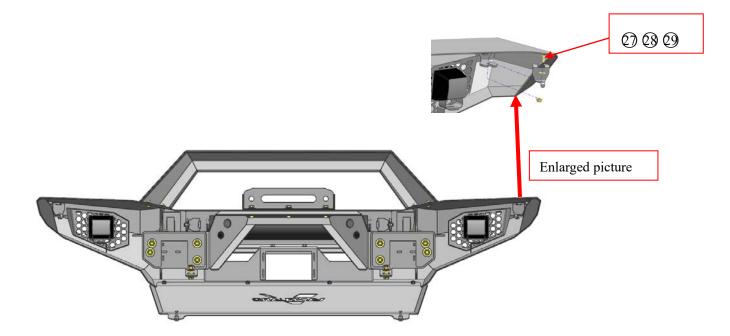

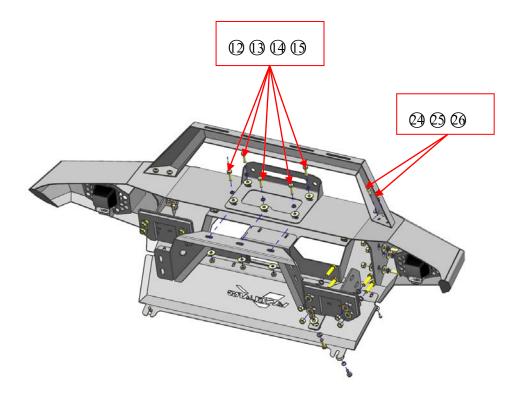

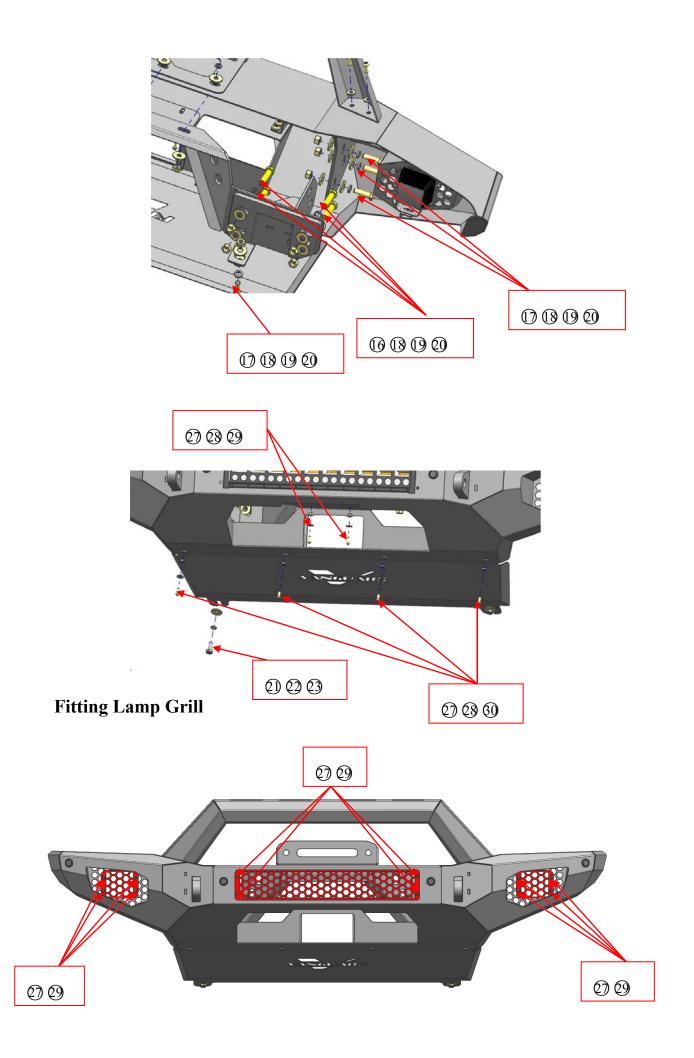


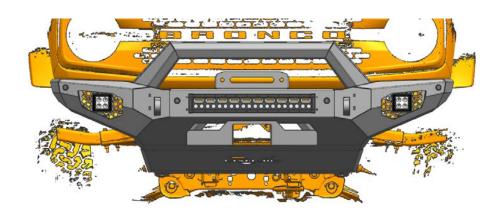

Winch Frame Install

Skid Plate Install

2.

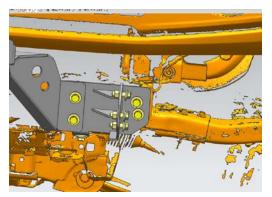

4、 INSTALLATION PROCEDURE:

Step 1: Refer to the parts list and parts diagram and check accessories are complete or not.

Step 2: For the quickly of installation, according with bracket installation map distinguishes left and right, then tight the bracket is finished.

Step 3: Remove the Mud from bottom, fixing the bracket on the bottom.

Step 4: Double check the accessories are complete and tighten.

5. Disclaimer: Caused due to improper installation initiates some related problem and losses, are beyond our company's quality assurance.