

INSTALLATION INSTRUCTION

ITEM NO: TG190302ZJ

DESCRIPTION: 19-20 Volkswagen Tiguan Elegant Low Runner Brackets - 2169B

● Attention


Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.

You may need to periodically to re-tighten all hardware for safety use after installation.

Installation pictures are only for your reference, there might be some differences between pictures and real parts but no effect for your fitting

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Brackets (left)	1		5	Hex Head Bolts	5	M10*35
2	Brackets (right)	1		6	Large Washer	14	φ 10*30*2.5
3	U-Bolts1	1		7	Spring Washer	9	φ 10
4	U-Bolts2	1		8	Hexagon Nut	9	M10

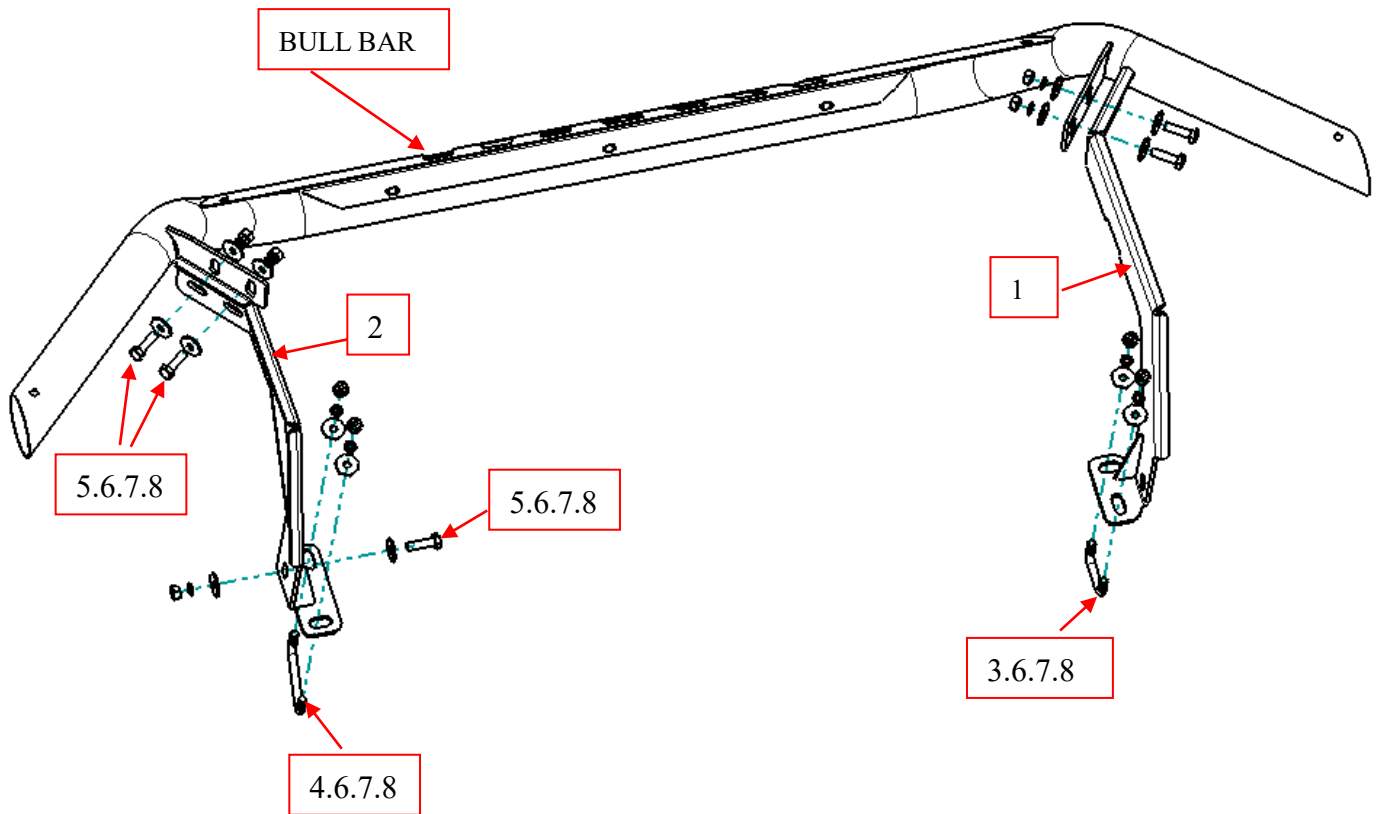


INSTALLATION PROCEDURE

Step 1: Refer to Part List to check if all hard ware are included.

Step 2: Refer to the following pictures to assemble brackets on the main tube .Easy Install refer P

M10*35 Hex Head Bolts
Φ 10*30*2.5 Large Washer
Φ 10 Spring Washer
M10 Hexagon Nut

PIC 1

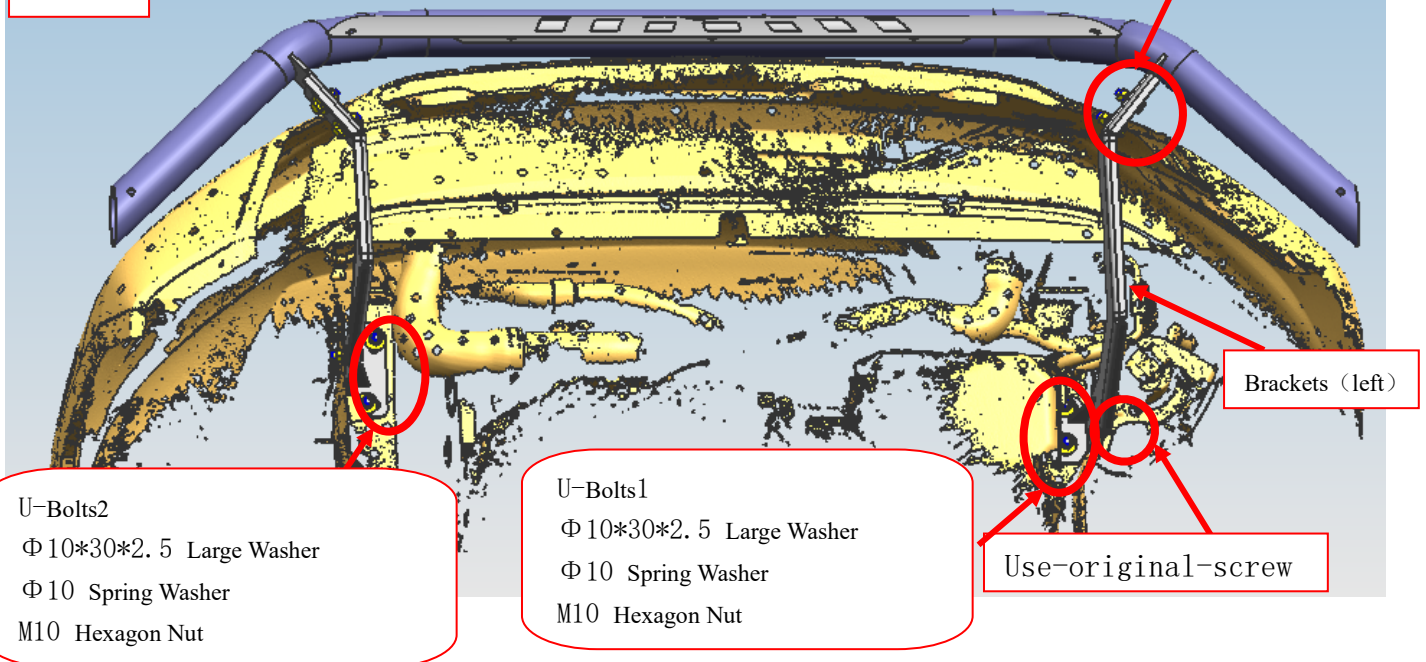


Step 3: Install the bar body on the bracket and adjust the mounting position of the bracket according to the position of the bar body

Step 4: Check if all hard ware are installed and then fasten all to complete the installation.

Step 5: Easy Install refer Pic2

PIC 2

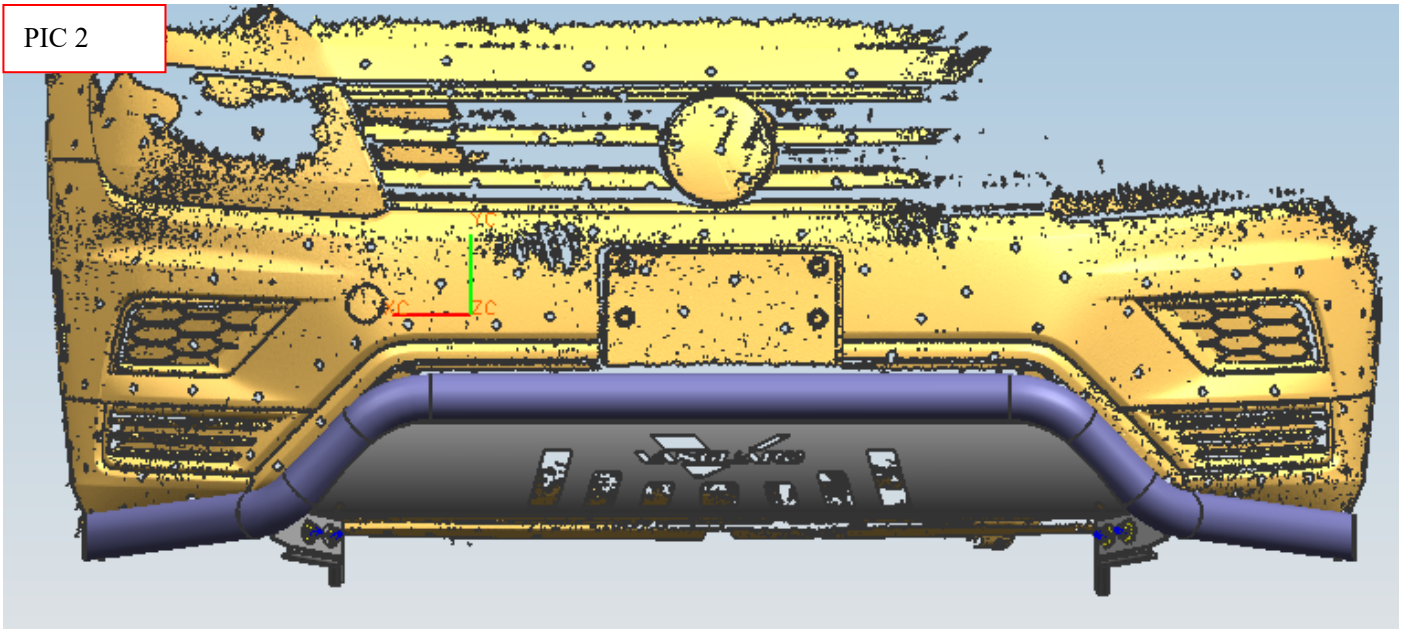

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's