




Installation Instructions



Part No. 2522BK+2521B

Vehicle: Toyota Tacoma 2024+

Product: Optimus Sport Bar

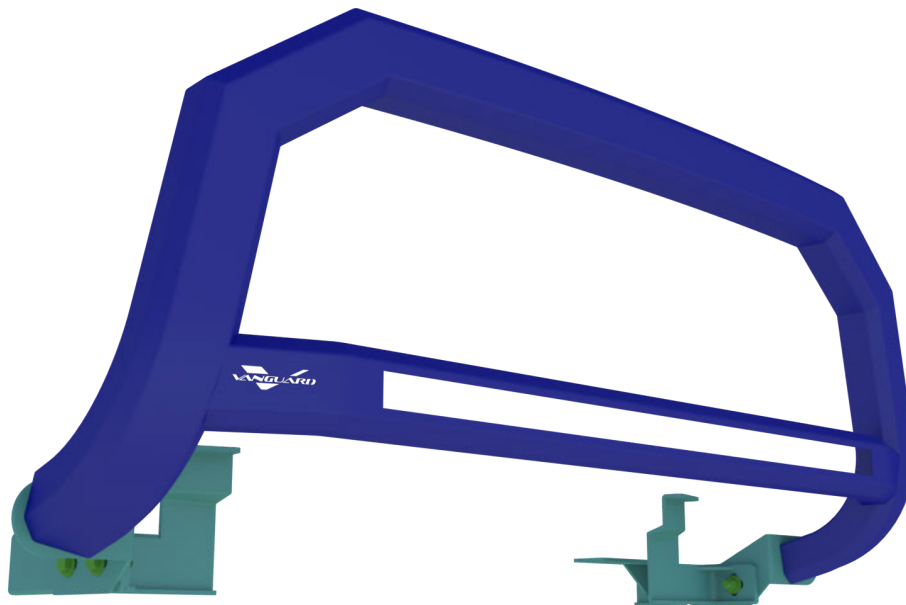


THANK YOU FOR CHOOSING OUR PRODUCT

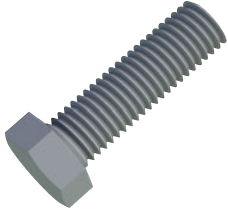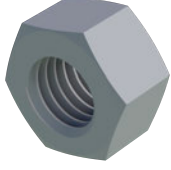Names	Pictures	Names	
(A) Bumper Guard		(B) Bracket (2 Pieces)	
(C) Support Bracket (2 Pieces)		(D) Adapter (2 Pieces)	
(E) M12x1.75 Hex-Bolt (6 Pieces)		(F) M12x1.75 Hex-Nut (4 Pieces)	
(G) M12 Washer (10 Pieces)		(H) M12 Lock Washer (6 Pieces)	



Step1: Take the trailer hook off of the car.





After taking it down it will be like this (Driver Side).

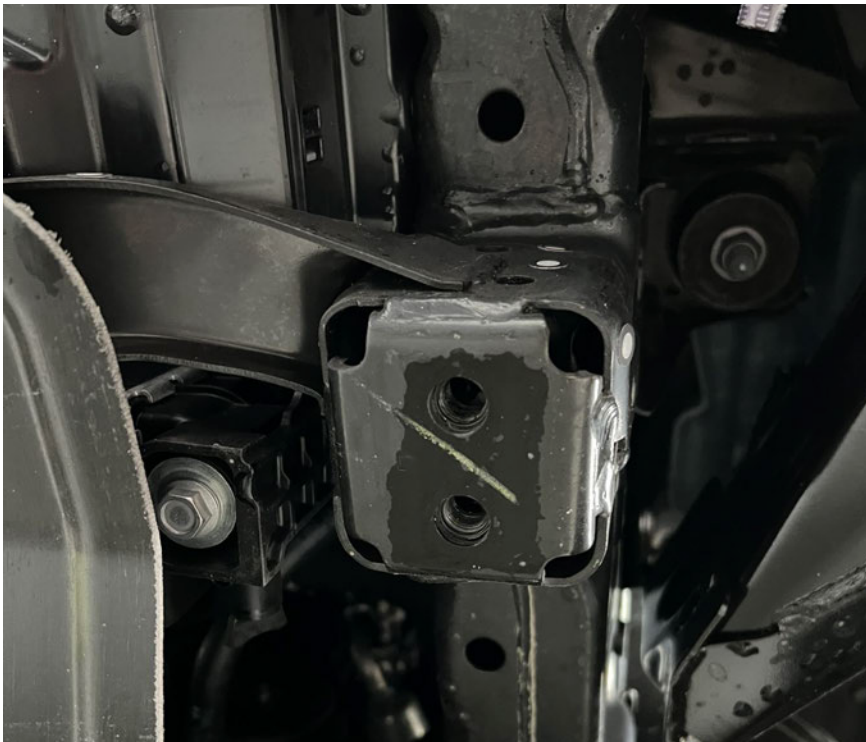



Step2: Mount the Bracket (B) onto the car, and put the trailer hook and Bracket (B) together, use original car bolts to fix it.

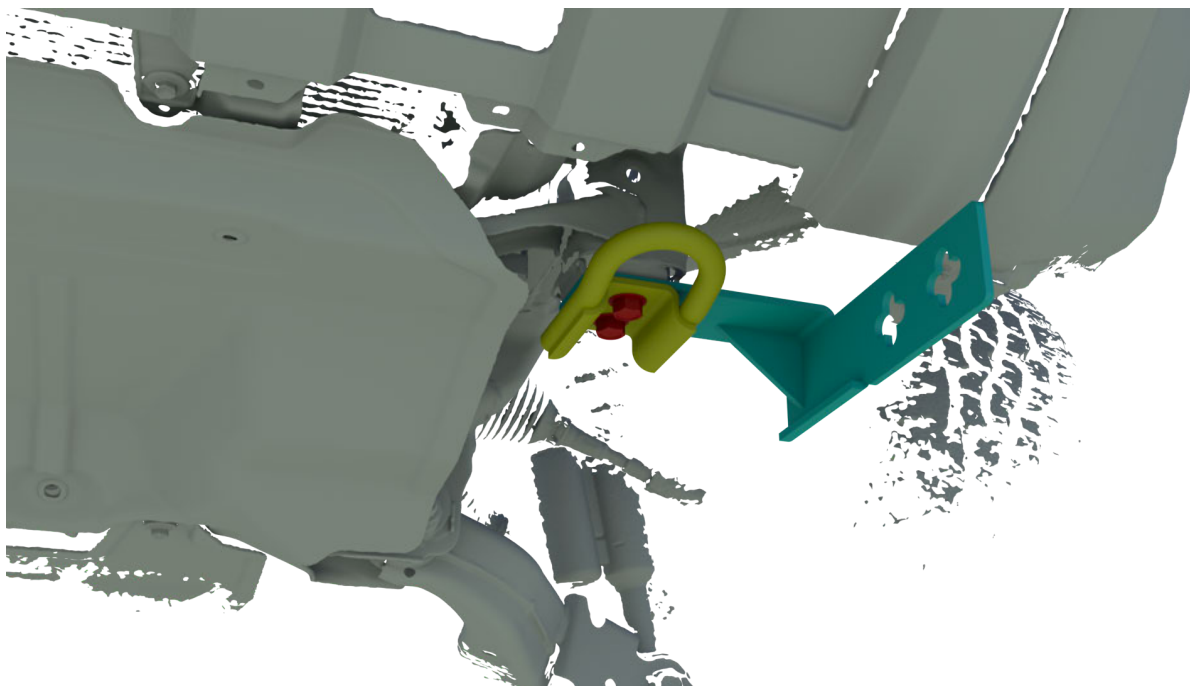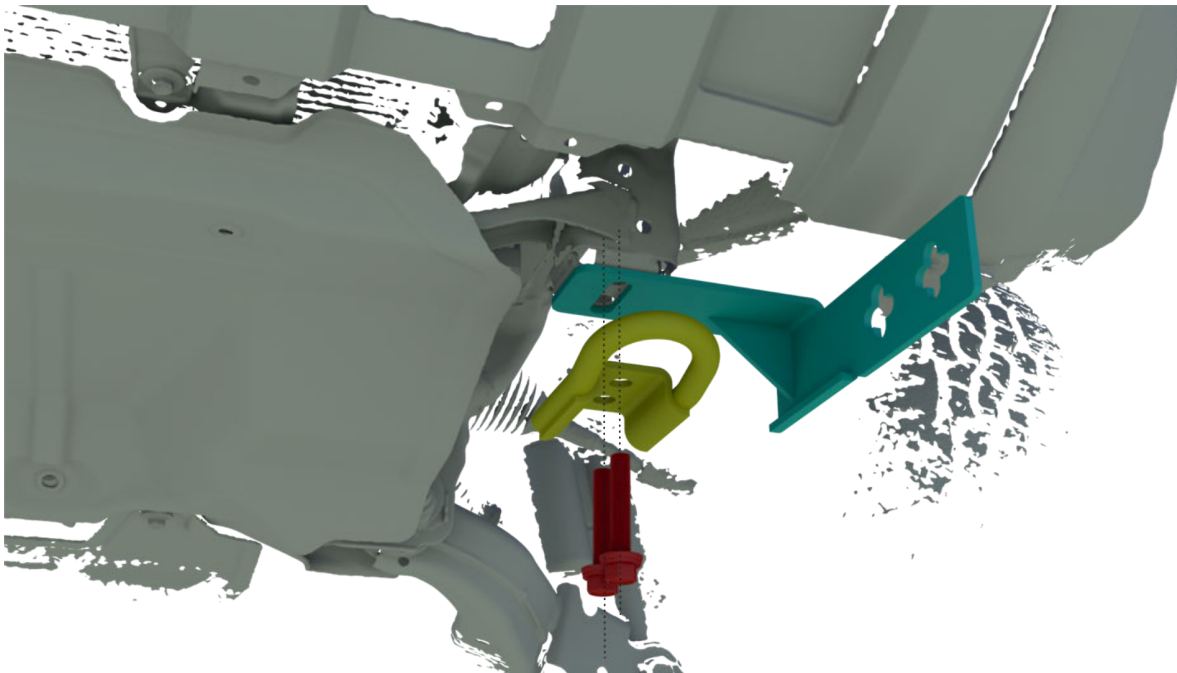



Step3: Take the 2 car bolts off inside of the car bumper.

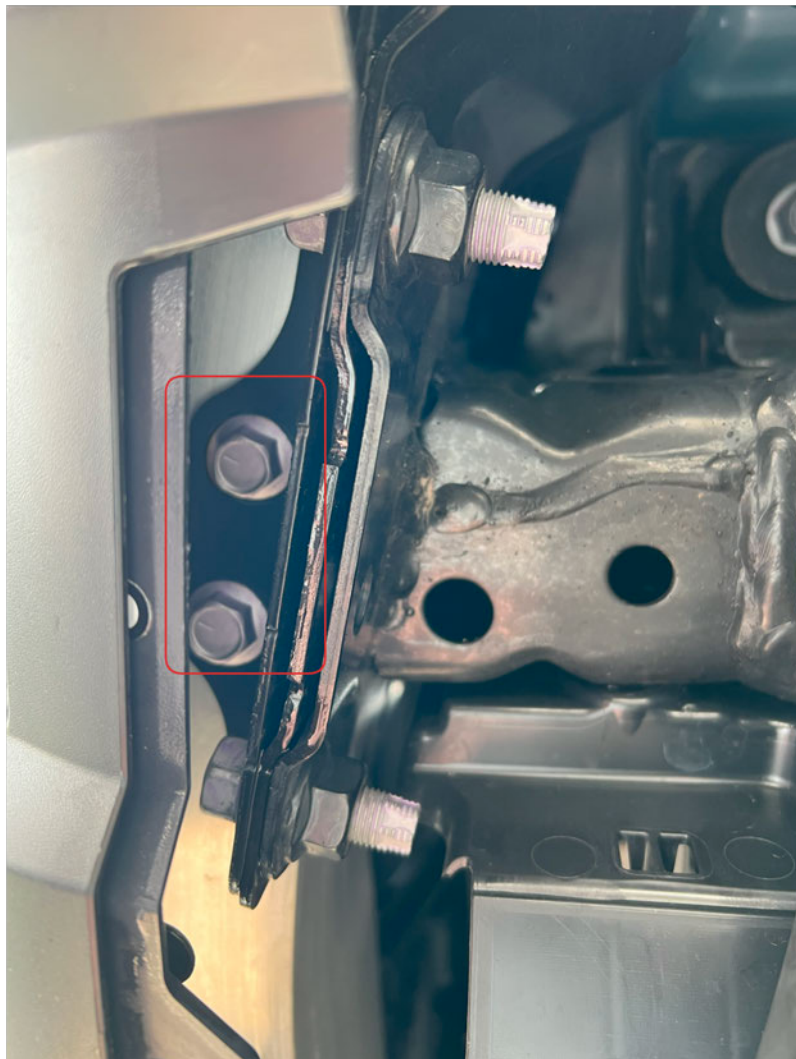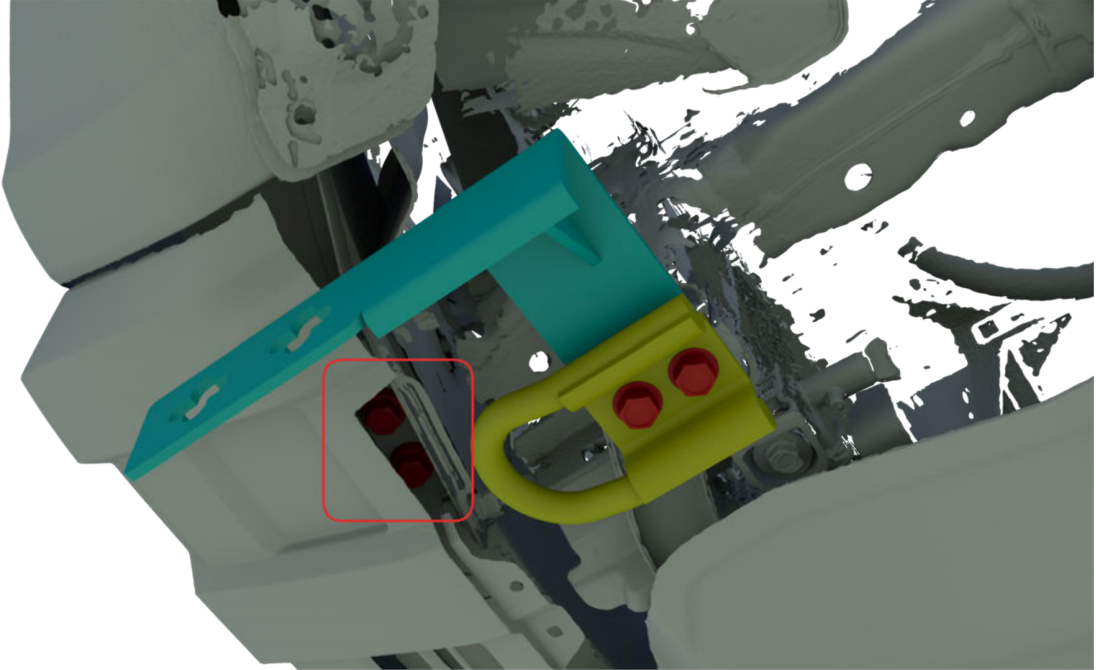


Step4: Mount Support Bracket (C) onto the car, use original car bolts to fix it.
(In this case, we hide the car bumper for easy to see where those car bolts are, you don't have to take off the bumper to install the Support Bracket (C) .)

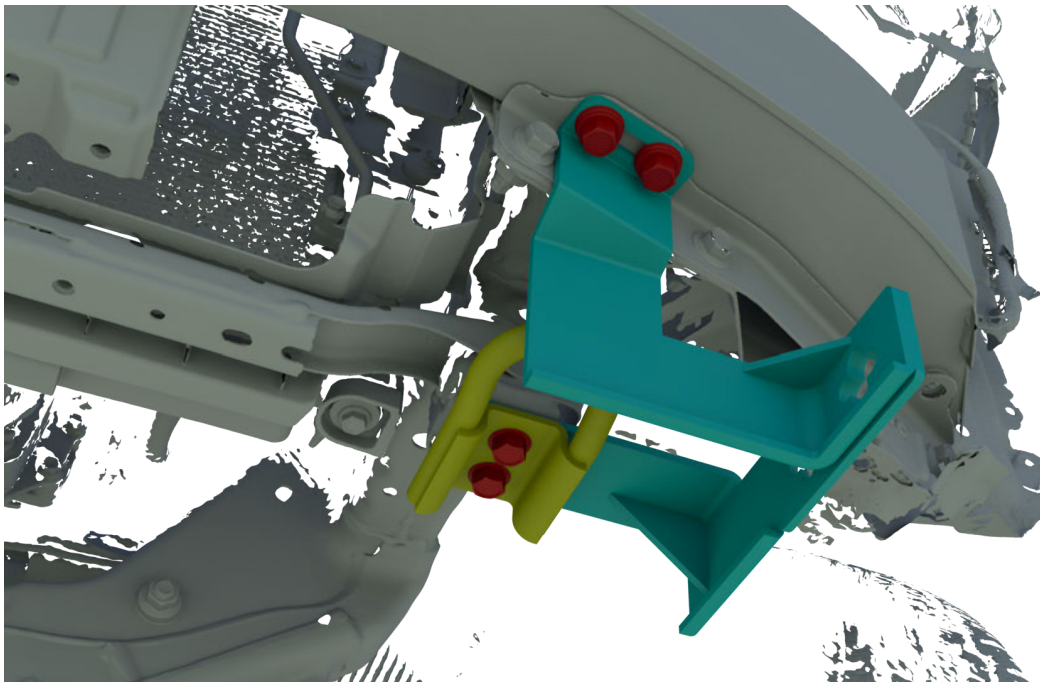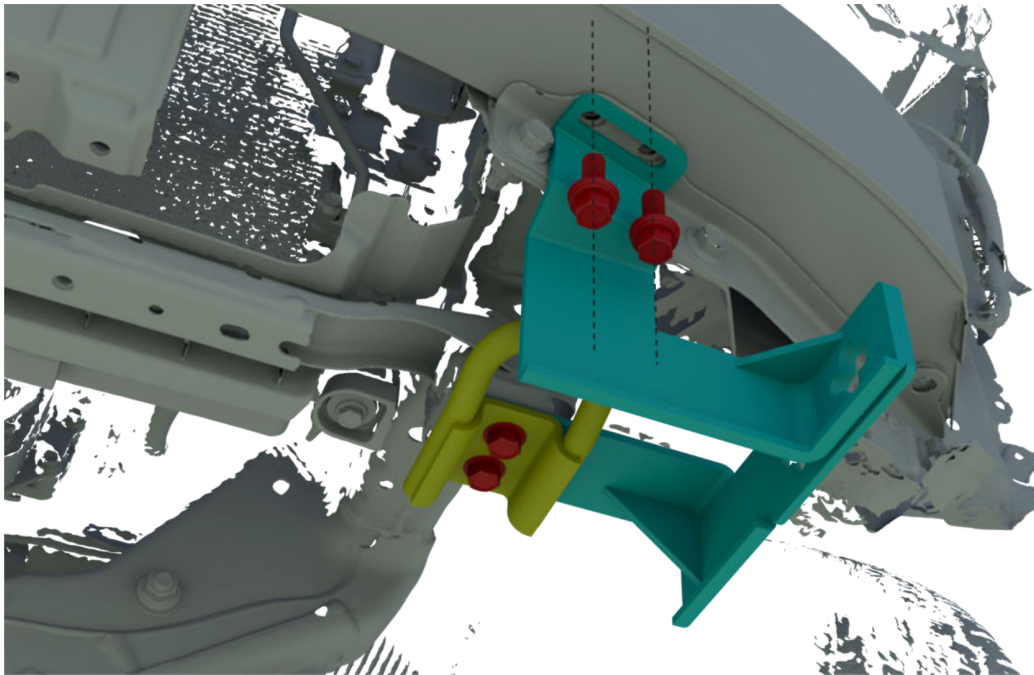

Step5: Mount Adapter (D) onto the Bracket (B) with screws (E/F/G/H).

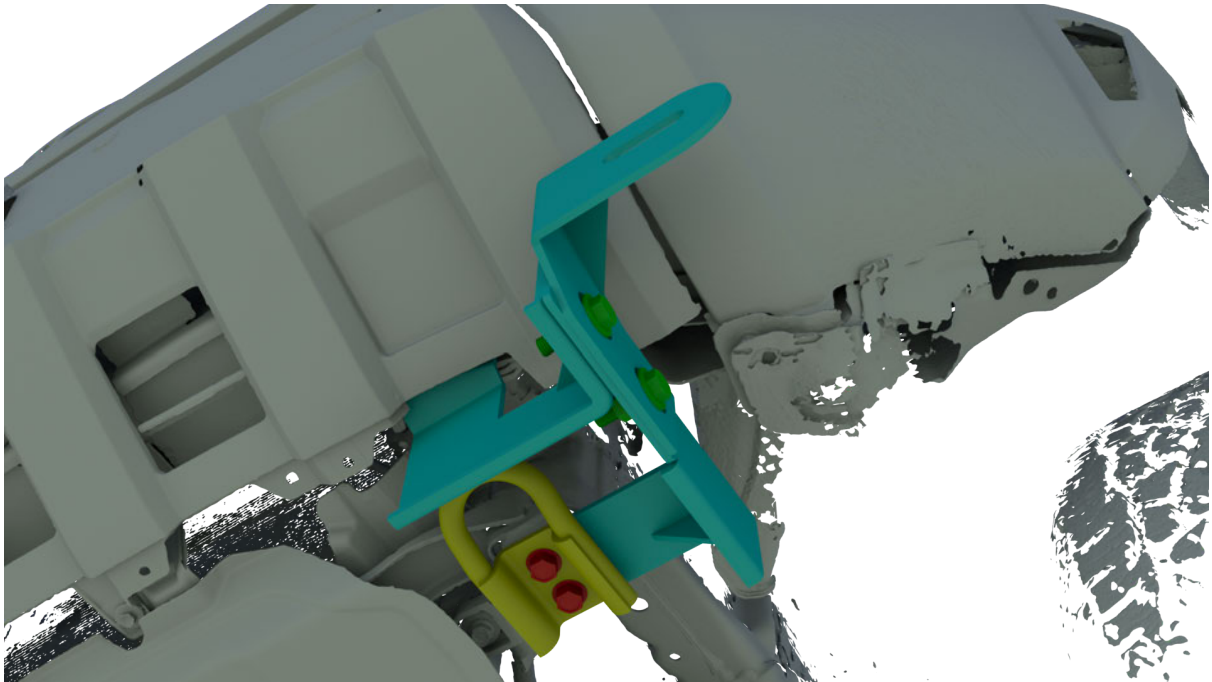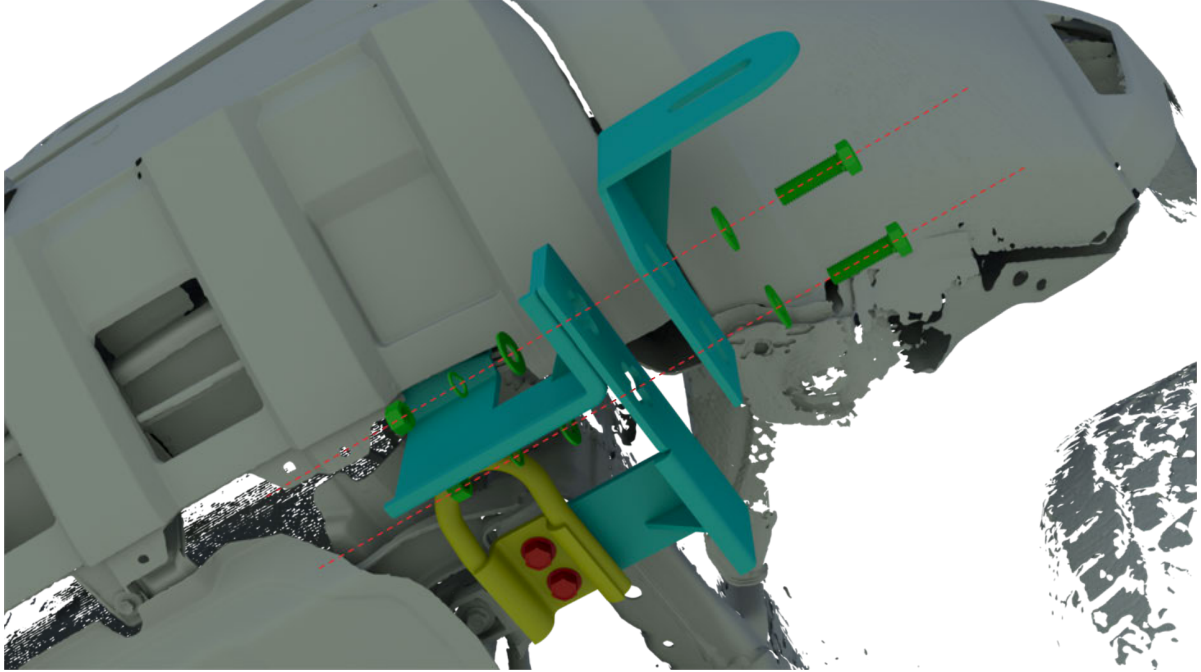

Step6: Bumper Guard (A) installation with screws (E/G/H).
(Before installing Bumper Guard (A), use the same method to mount brackets for Passenger Side of the car.)

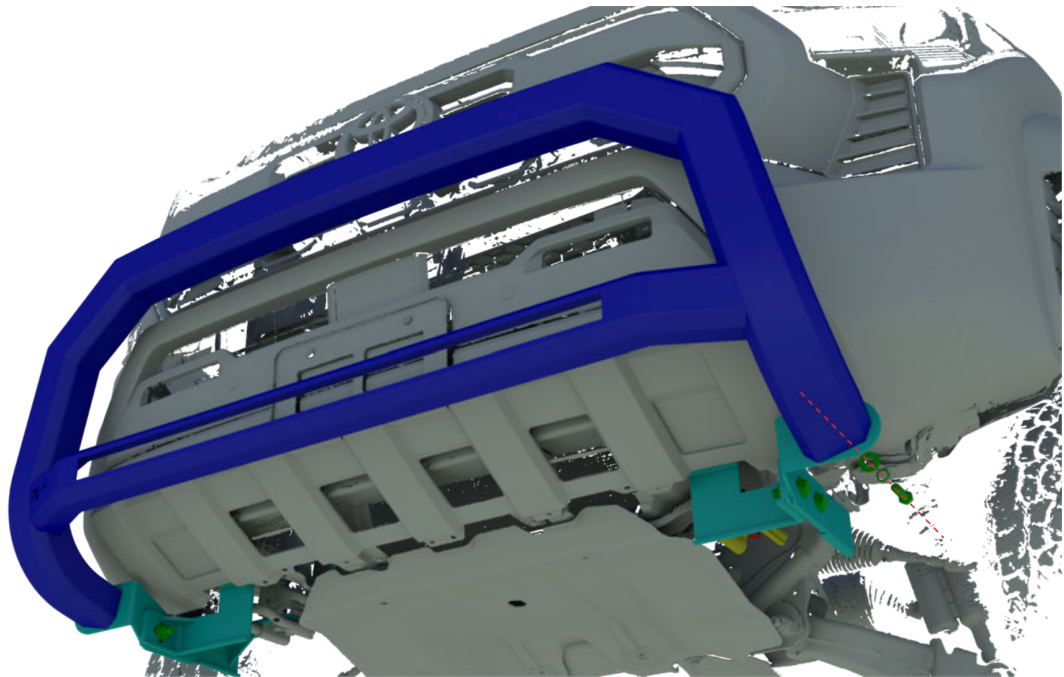

Final showing.

