

## INSTALLATION INSTRUCTIONS

## 2025 Murano 1274B REAR BUMPER GUARD



No	Name	Photo	Qty
A	Bolt 1	M12x1.25 40mm	4
В	Bolt 2	M12x1.75 40mm	4
С	Flat Washer	0	12
D	Lock Washer	Q	4








Before



After




Passenger side

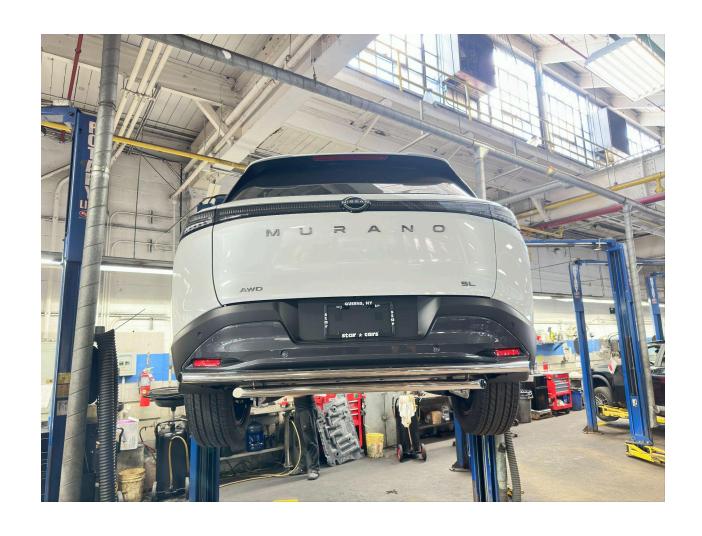


Raise the Car using a Lift

Step 1:

Mounting the Bracket with Bolt 1 two on each side, put on the Bracket first, then Flat Washer, then screw the Bolt 1

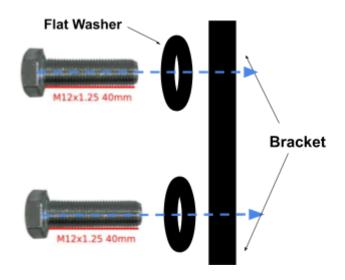

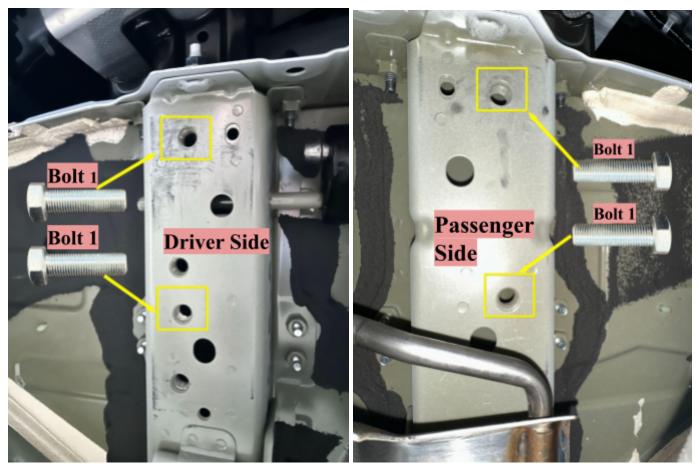

Step 2:

Install the Rear Bumper with Bolt 2, Nut, Flat Washer, and Lock Washer

