

Installation Instruction

Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.

Attentions

- The following symbols are used in this installation instruction.



Caution

Relevant matters must be obeyed for safety.

Non-compliance may result in injury or other accidents.

Please read carefully and obey strictly.



Note

Relevant matters must be obeyed for the smooth installation and use.

- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive we are not responsible for any consequences if you install follow your individual subjective thoughts.

● Product Composition *Please confirm if it is missing.

1. Wings 2 (One on each side)	2. Body Guard 2	3. Component 3 (1 piece)	4. Straight Bar (1 piece)	5. Top Bar (1 piece)	6. Frame Mounting Bracket 2
7. Frame Mounting Bracket Support Bracket 2	8. M10x30 hex screw (12 piece)	9. M10 spring washer (12 piece)	10. M10 flat washer (12 piece)	11. M10*30 hex screw (26 piece)	12. M10 flat washer (26 piece)
13. M10 Lock washer (26 piece)	14. M10 nut (24 piece)				

Ratchet	Torque wrench	socket	plum wrench		
---------	---------------	--------	-------------	--	--

● WAttentions

- The labels of fitting procedure inside the thick wireframe is particularly important. Pay attention to them in the actual installation.
- Pay attention to safety during installation.

Fitting Procedure


1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

2. From underside of vehicle, remove the two bolts holding the driver factory tow hook, then remove tow hook from vehicle. **(Figure 1)**, Save hardware for later use.



(Figure 1)

3. Install the support bracket on Mounting Bracket using M10x30 Hex bolts **(Figure 2)**. Repeat this step for Driver Side Mounting Bracket. Once the support brackets are loosely installed, proceed to attach top brackets to chassis by using the existing factory bolts **(Figure 3)**.

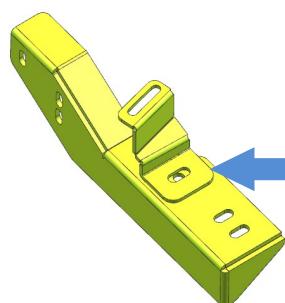

M10X30 Hex Bolt
M10 Flat Washers
M10 Lock Washers
M10 Nuts

(Figure



(Figure





Existing factory bolts

Document No.	Issue	Date		Page
RD16055	00	2025/2/10		2/5

4. Locate Passenger Side Mounting Bracket and loosely attach it to vehicle by using the factory bolts removed in step two (**Figure 4**). Repeat this step for Driver Side Mounting Bracket.

NOTE: This Grille Guard is not compatible with the factory tow hooks and they will not be reinstalled.

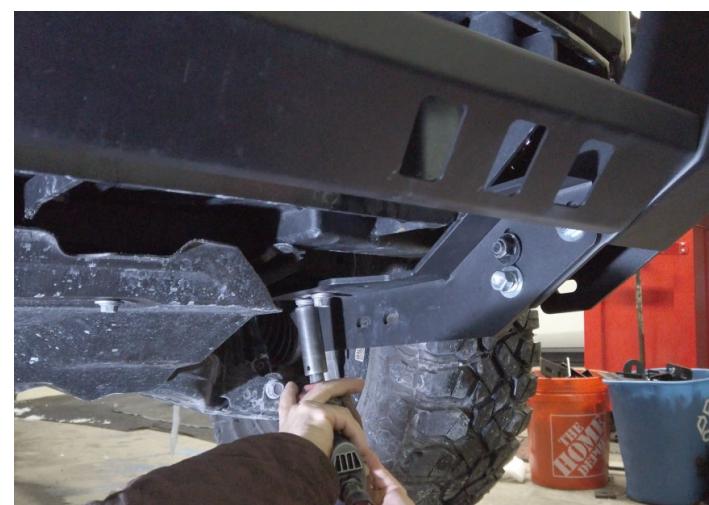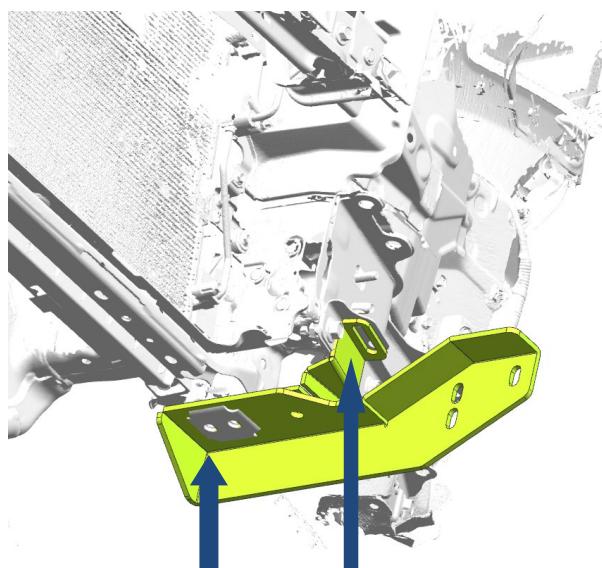


(Figure 4)


Reuse factory bolts

5. Level and adjust the Grille Guard and tighten all hardware at this time.

M10 x30 Hex Bolt
M10 Flat washer
M10 Lock washer x12

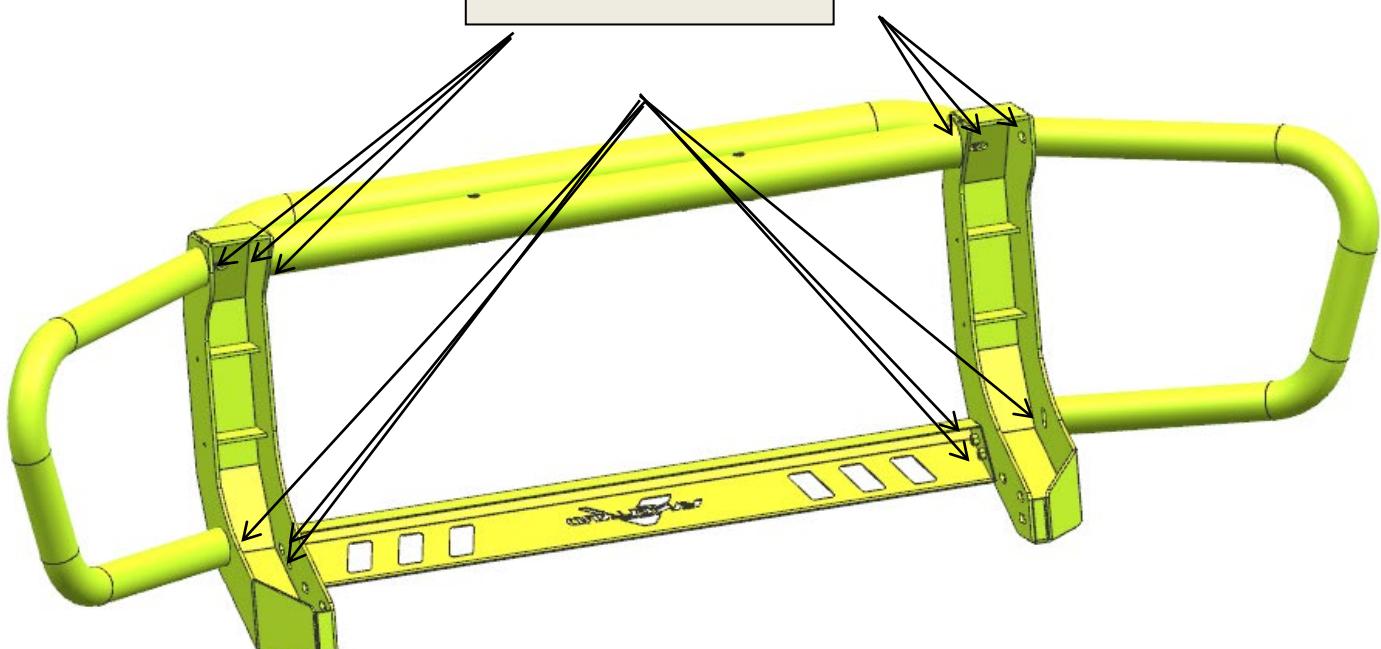

M10*30 Hex Bolt
M10 Flat washers
M10 Lock washers
M10 Nuts

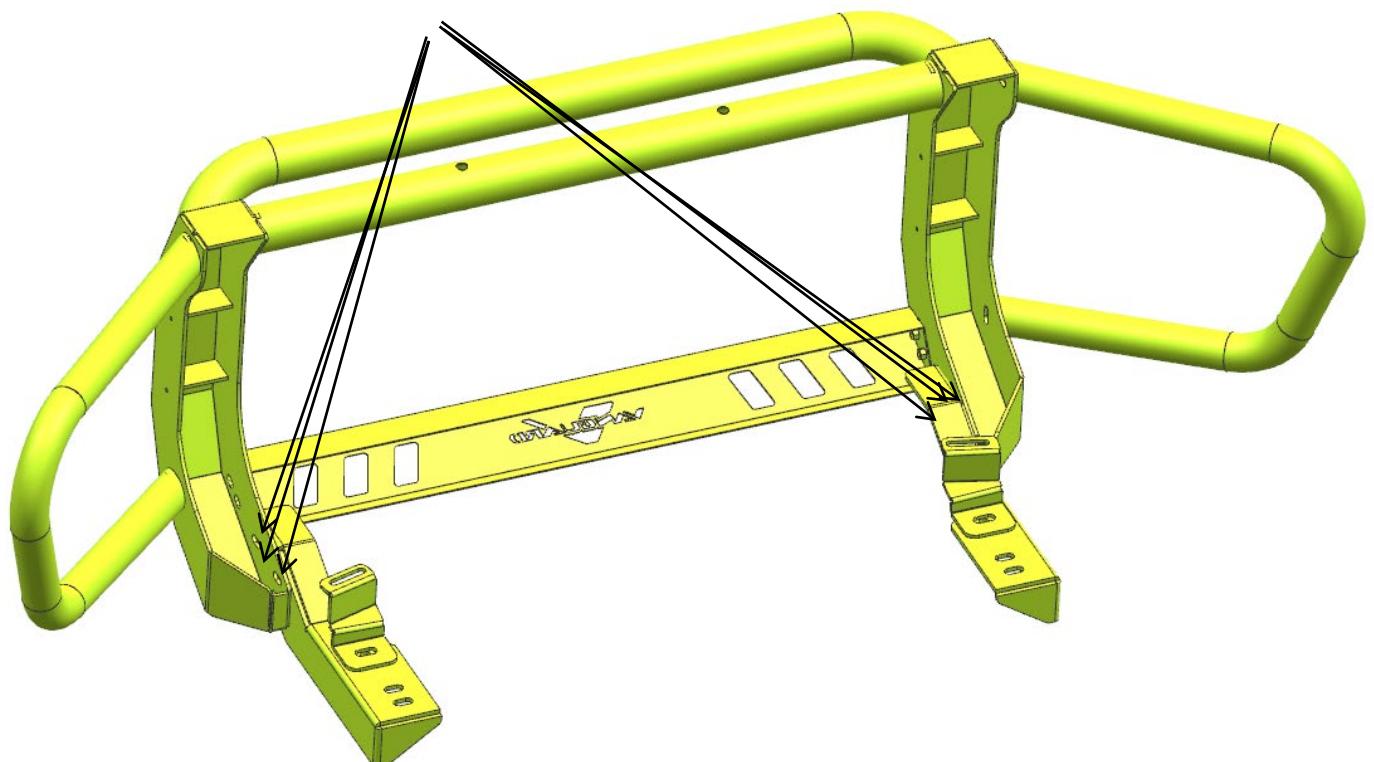

(Complete installation)



TIPS

= Routine Maintenance =

1) Please use neutral detergent to wet the soft cloth or suede and so on, then clean our produc

Note

- Do not use any hard objects such as brushes. Otherwise, it will cause surface scratches.
- Please protect the product from gasoline, light fuel, fuel oil, brake fuel, engine oil, paint thinner, sulphuric acid(battery liquid), wax remover, etc. Otherwise, it will cause product discoloration and dyeing. In case product come into contact with above objects, please use neutral detergent to wet the soft cloth or suede and so on, then clean our product and wash it with water quickly.

Document No.	Issue	Date	Page
RD16055	00	2025/2/10	5/5