




## Installation Instructions



Part No. 2570BK+2568B

Vehicle: Toyota 4Runner 2025+

Product: Super Wide A Bar

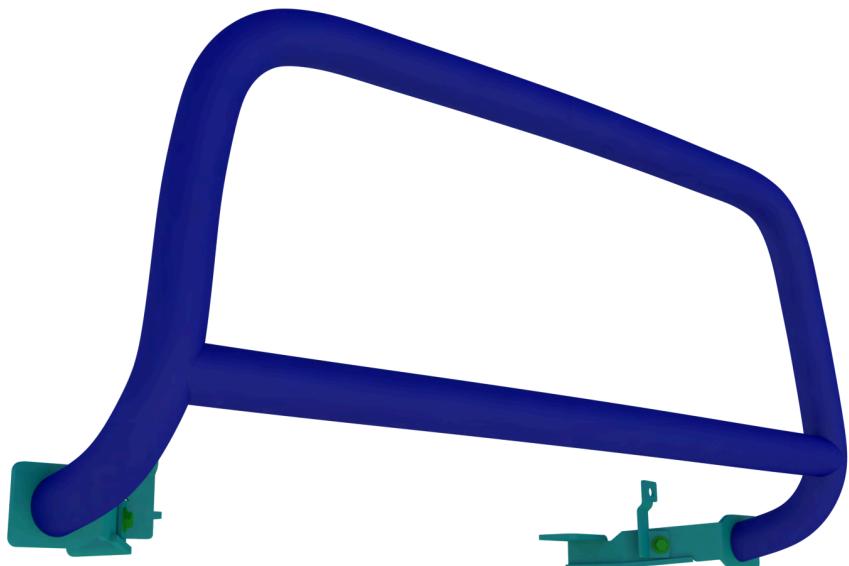

THANK YOU FOR CHOOSING OUR PRODUCT

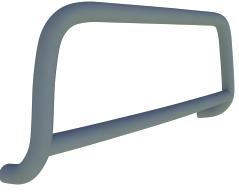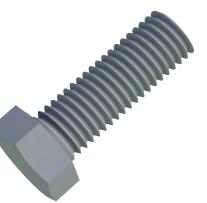Names	Pictures	Names	
(A) Bumper Guard		(B) Bracket (2 Pieces)	
(C) Support Bracket (2 Pieces)		(D) M12x1.75 Hex-Bolt 35mm (4 Pieces)	
(E) M12x1.75 Hex-Nut (2 Pieces)		(F) M12 Washer (6 Pieces)	
(G) M12 Lock Washer (4 Pieces)			


Step1: Take the trailer hook out of the car.





After taking it down it will be like this (Driver Side).




Step2: Mount the Bracket (B) onto the car, and put the trailer hook and Bracket (B) together, use original car bolts to fix it.

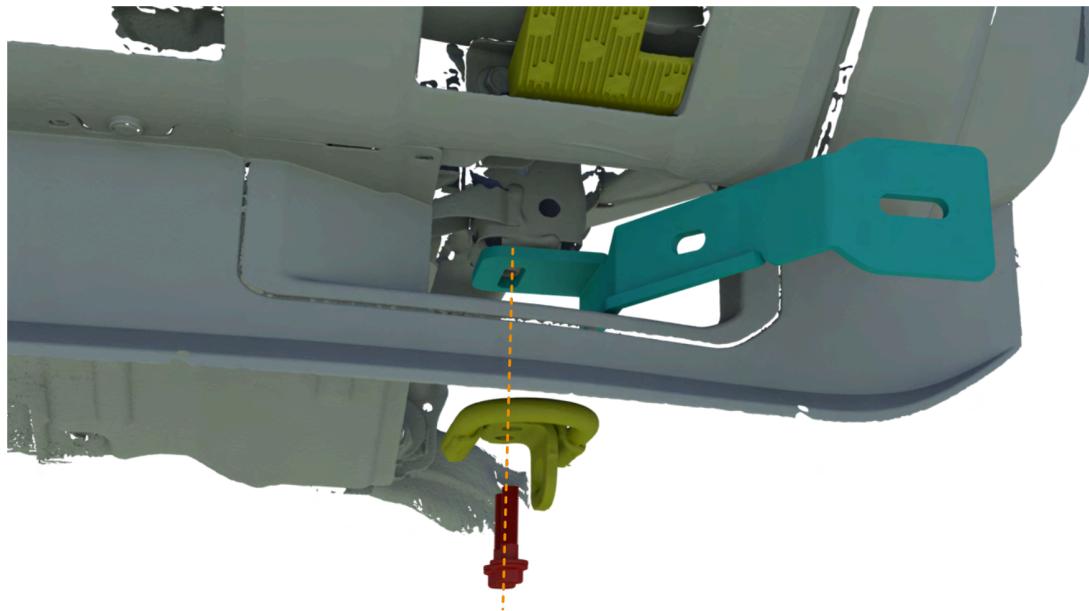



Step3: Take the bolt's cover out of the car.

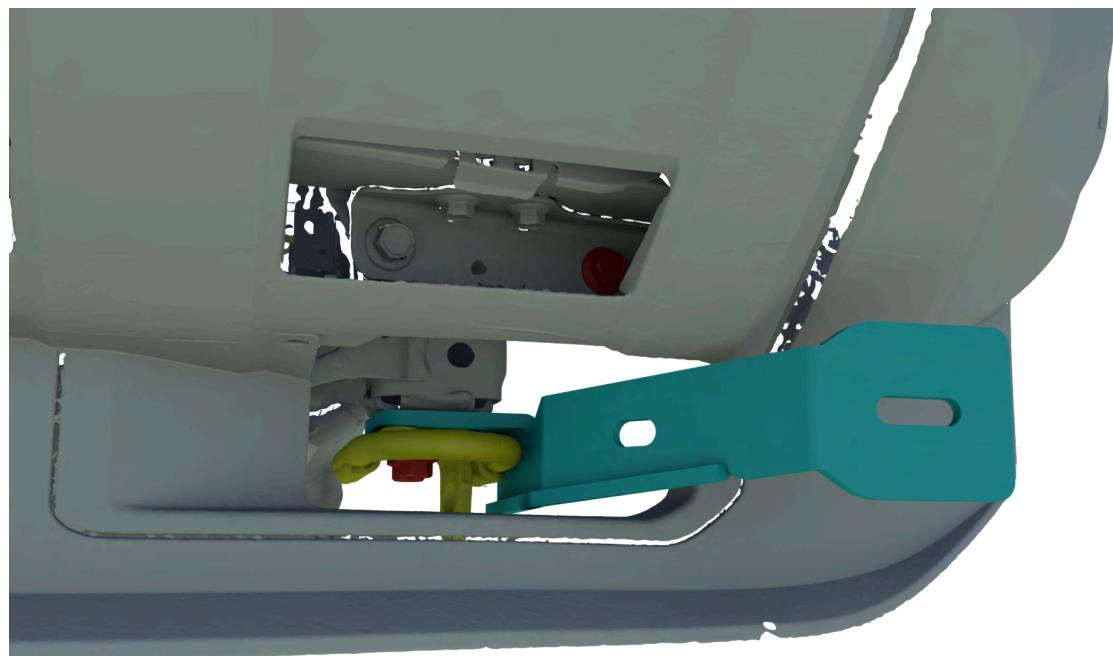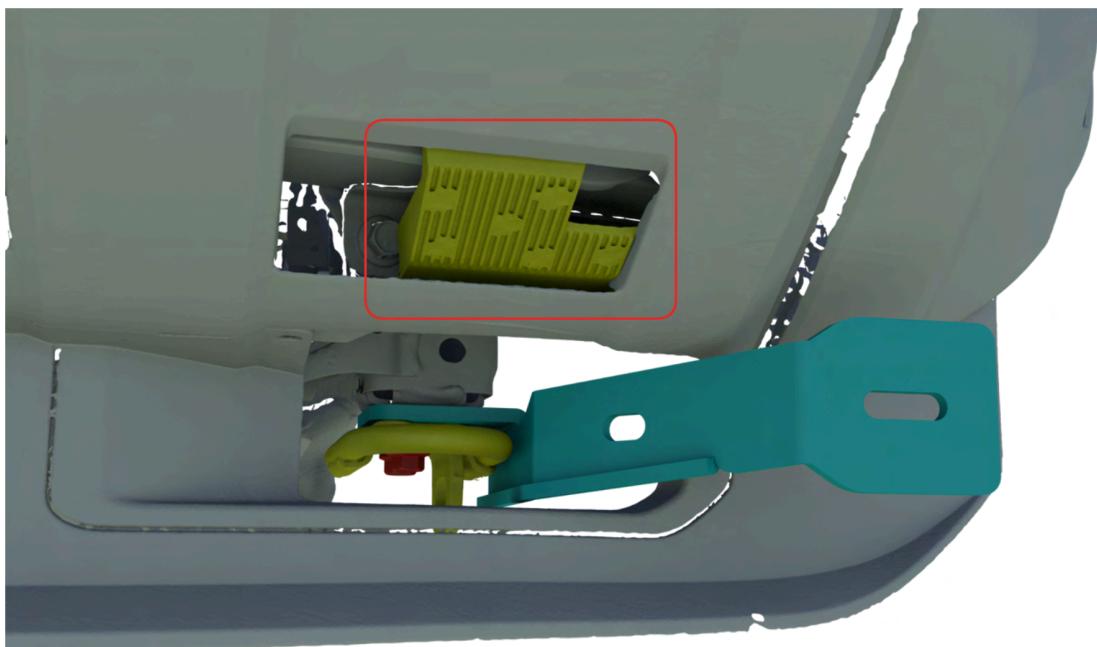



Step4: Take the right side car bolt out inside of the car bumper.

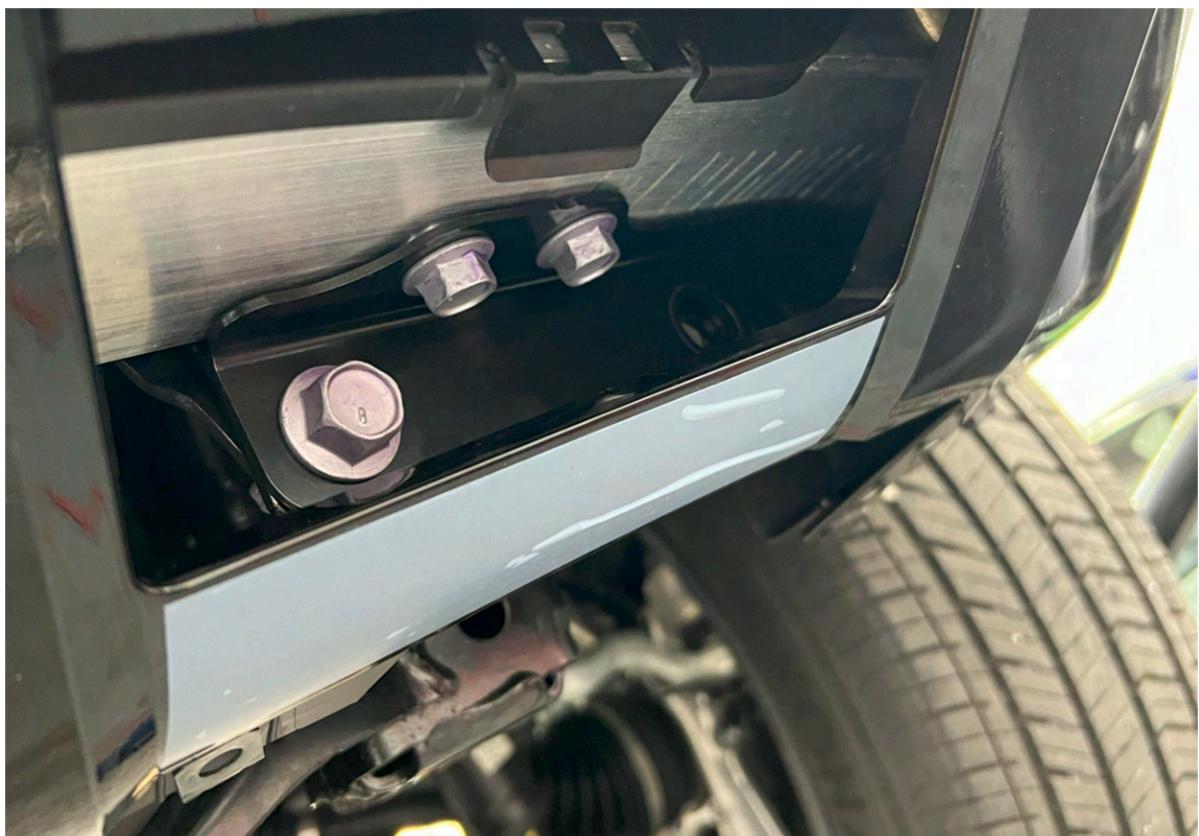



Step5: Mount Support Bracket (C) onto the car, use the original car bolt to fix it.

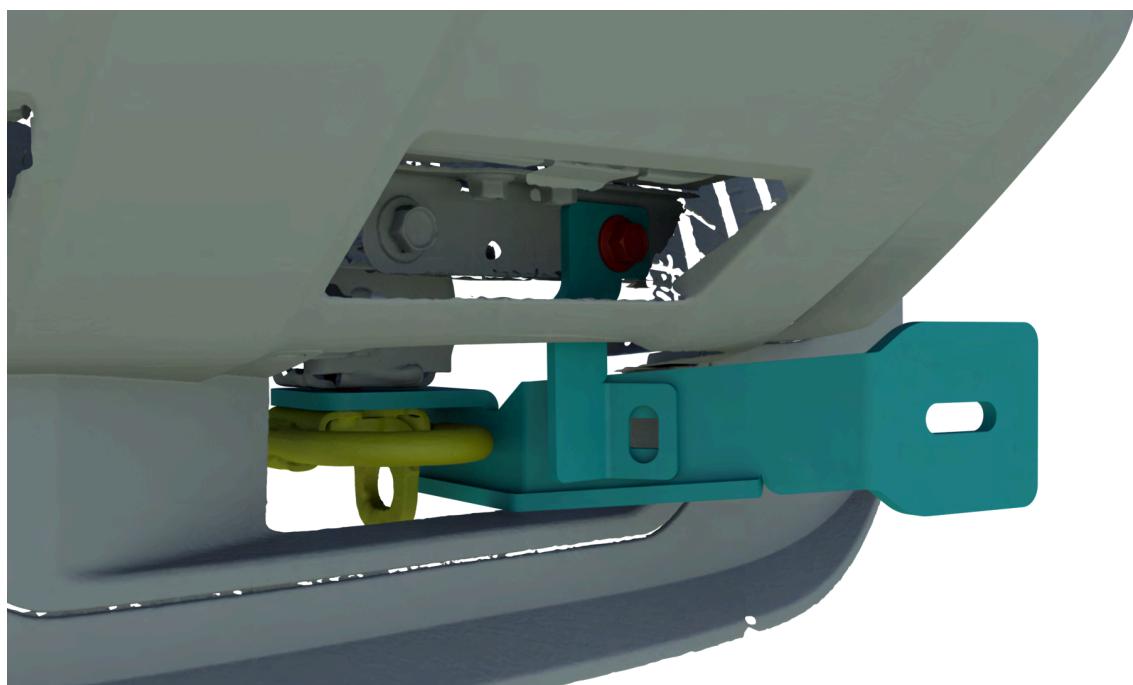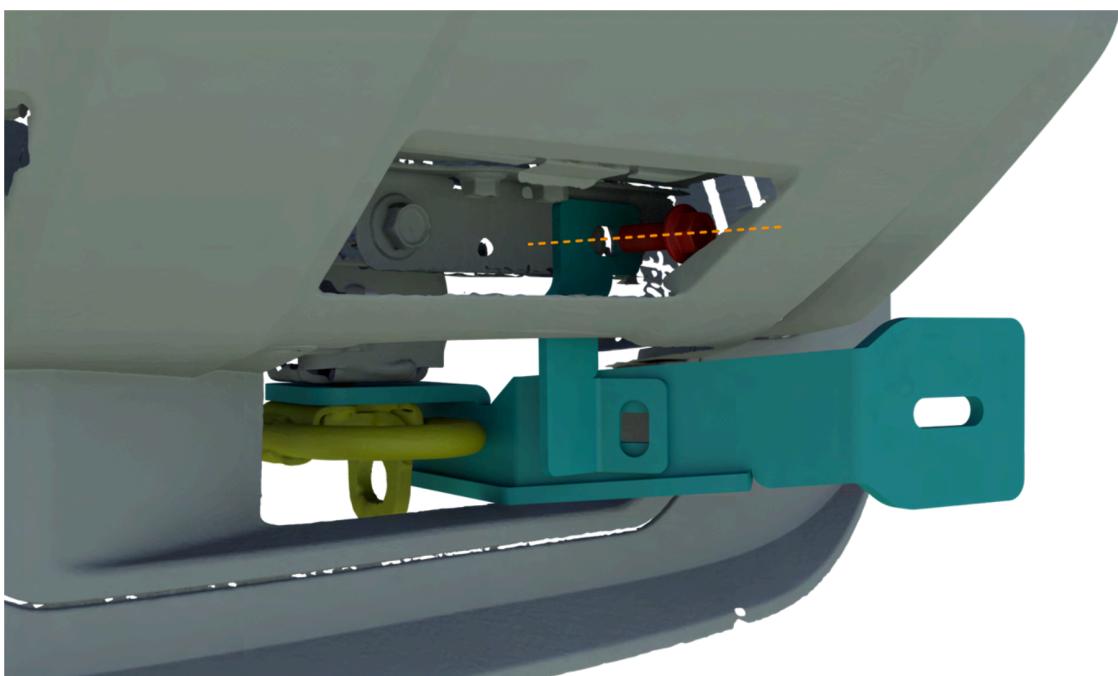

Step6: Use Screws (D/E/F/G) to fix Bracket (B) and Support Bracket (C).

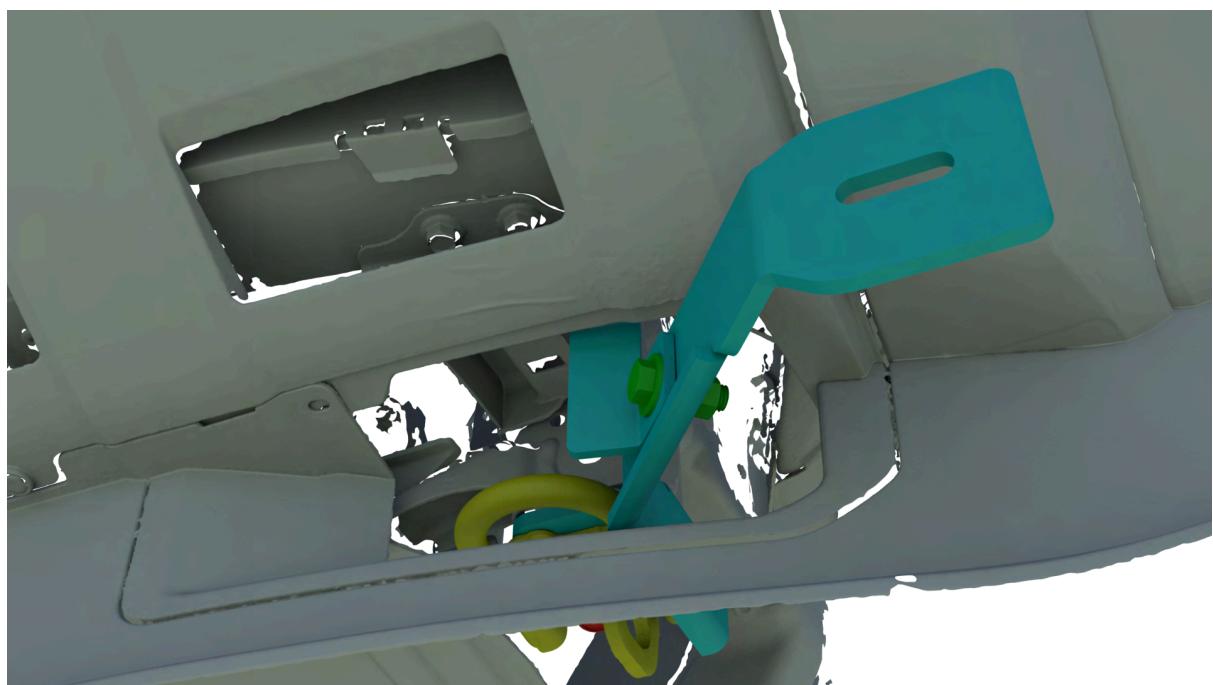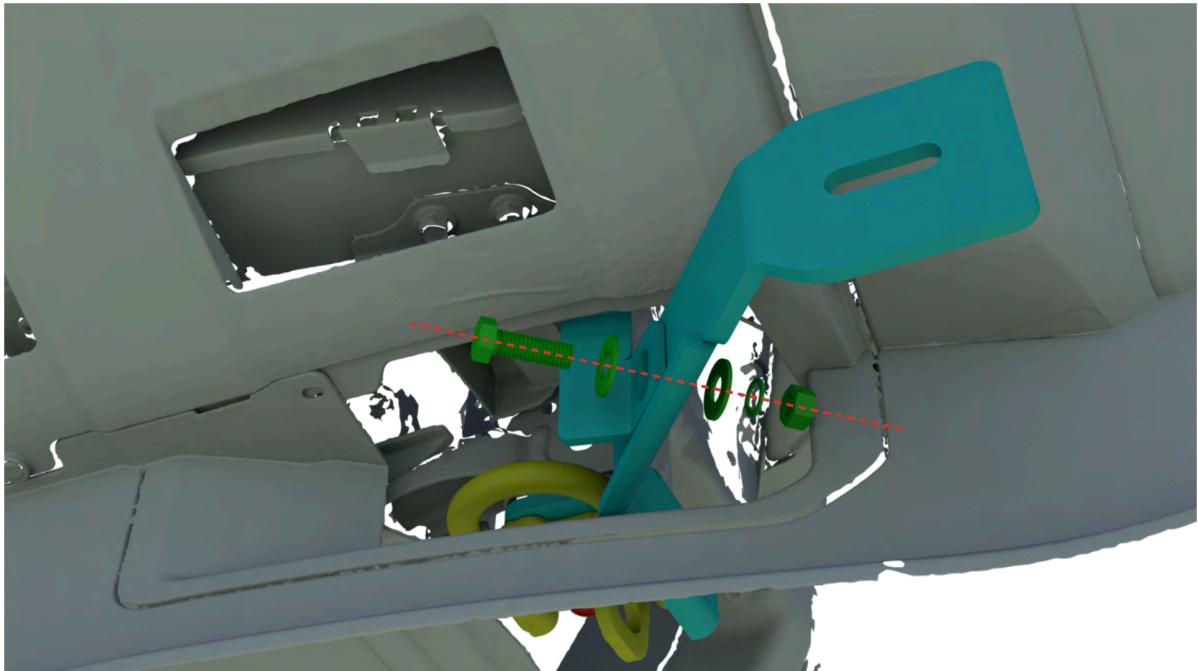


Step7: Put the bolt cover back on the car.

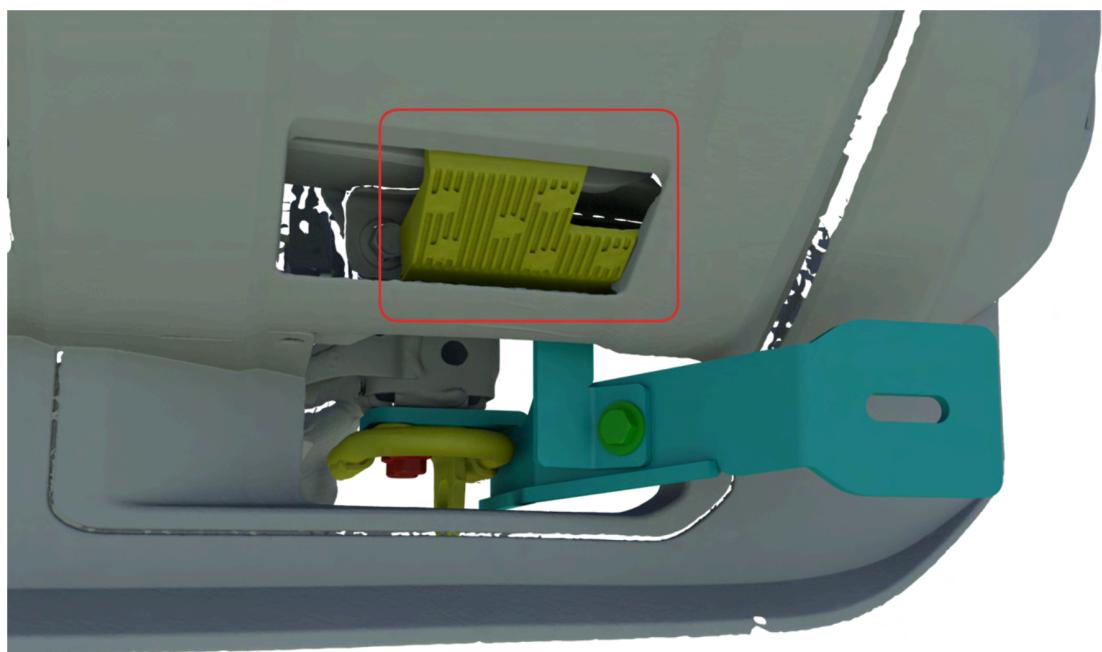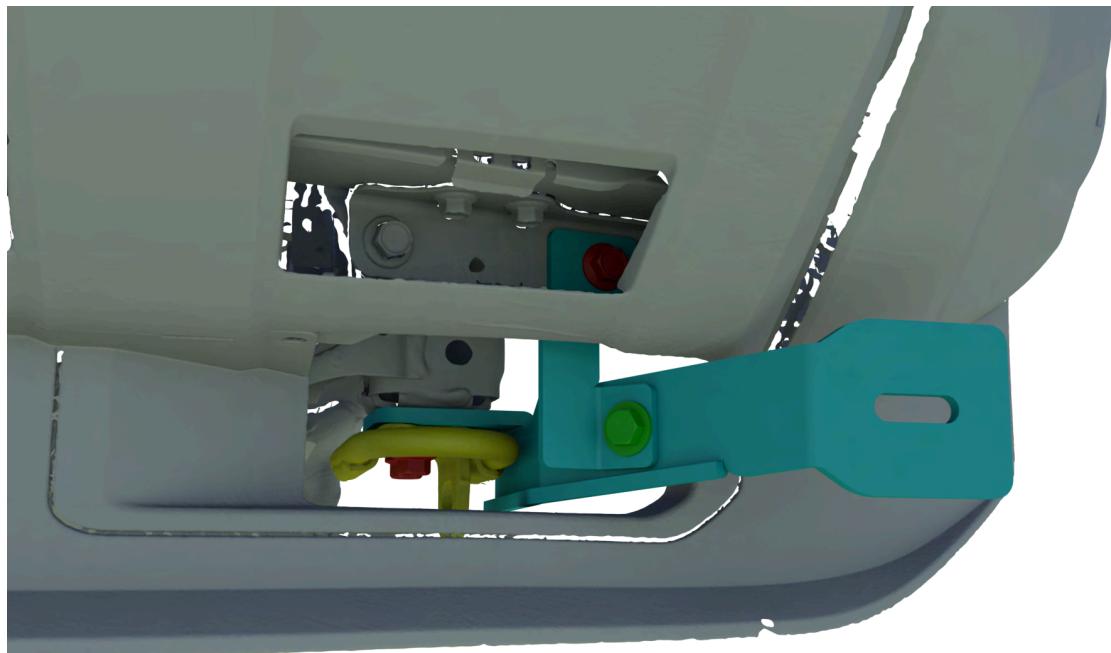

Step8: Bumper Guard (A) installation with screws (D/F/G).

(Before installing Bumper Guard (A), use the same method to mount brackets for Passenger Side of the car.)

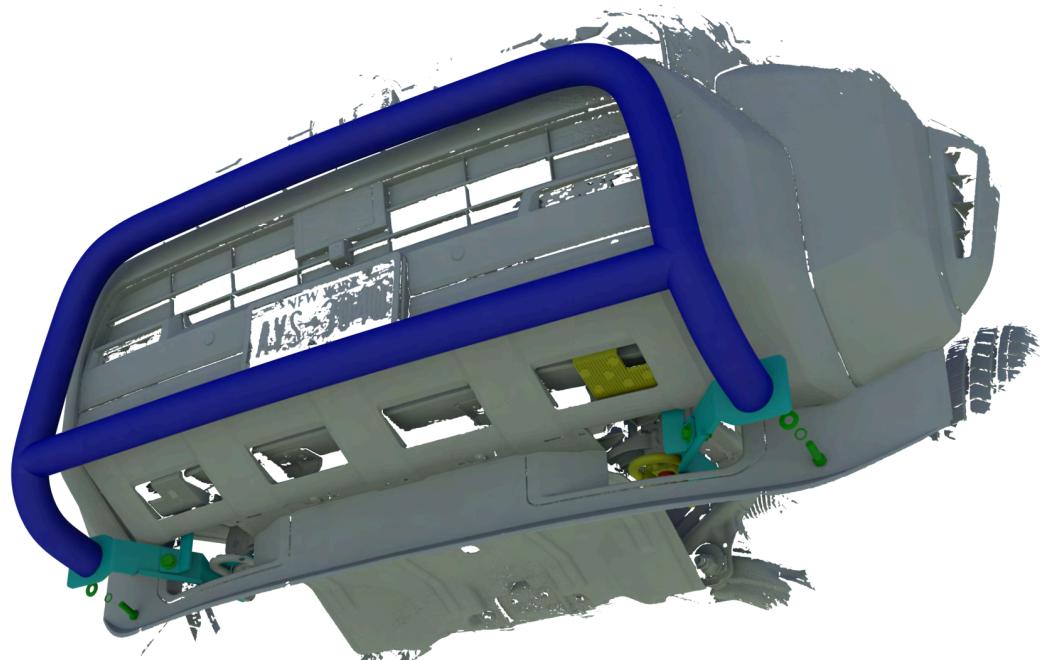

Final showing.

