




Installation Instructions



Part No. 2517SS_2518BK+2519B

Vehicle: Honda Pilot 2023-2025



Product: Super Wide A Bar

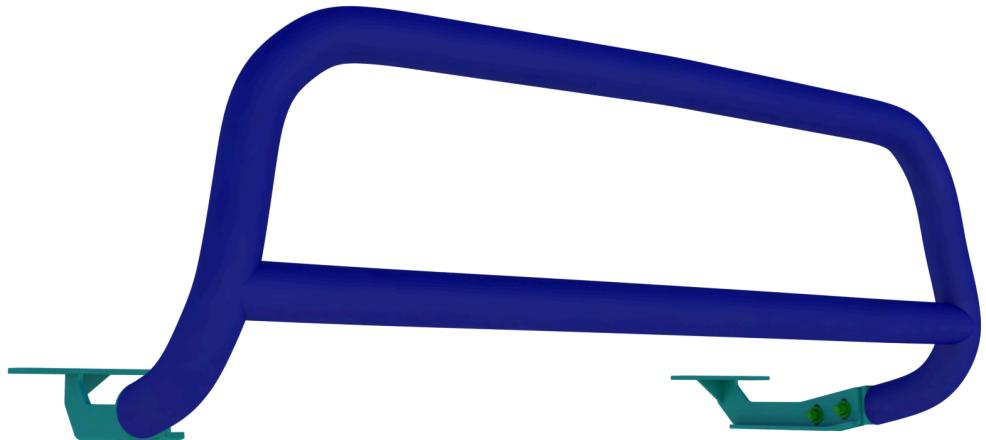



THANK YOU FOR CHOOSING OUR PRODUCT

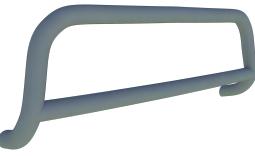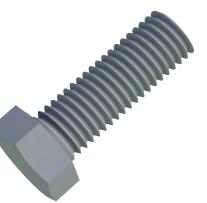Names	Pictures	Names	Pictures
(A) Bumper Guard		(B) Bracket (2 Pieces)	
(C) Adapter Bracket (2 Pieces)		(D) M12x1.75 Hex-Bolt 35mm (6 Pieces)	
(E) M12x1.75 Hex-Nut (4 Pieces)		(F) M12 Washer (10 Pieces)	
(G) M12 Lock Washer (6 Pieces)			



Step1: Take the original bolts out of the car.

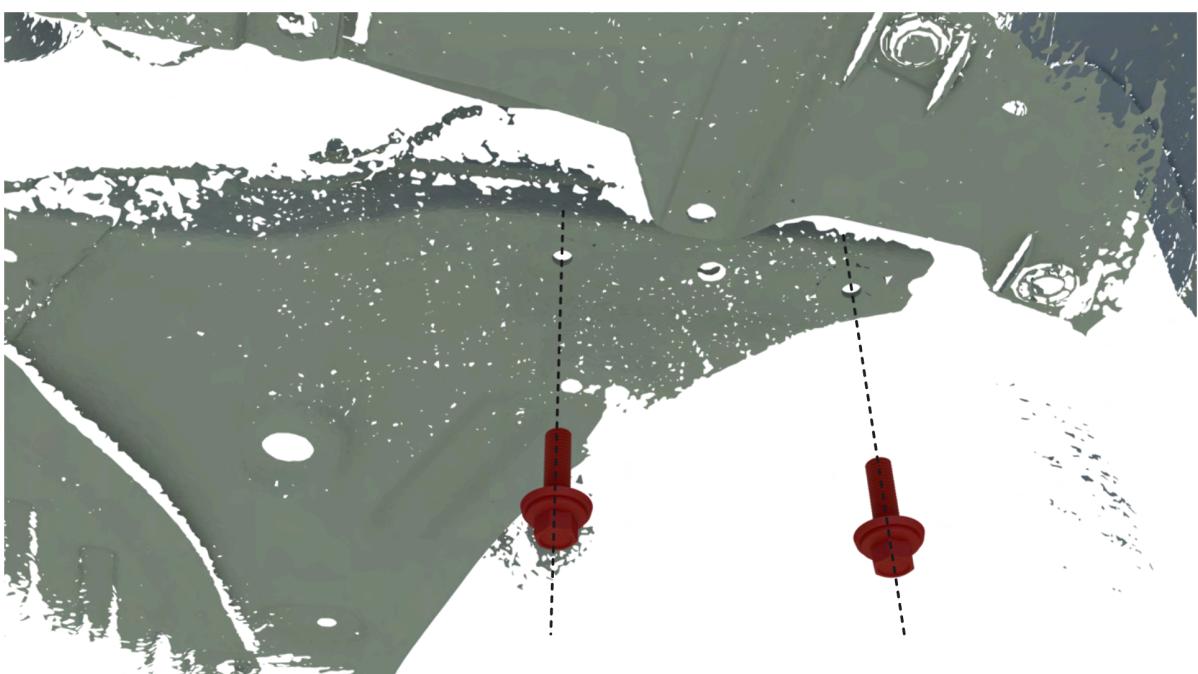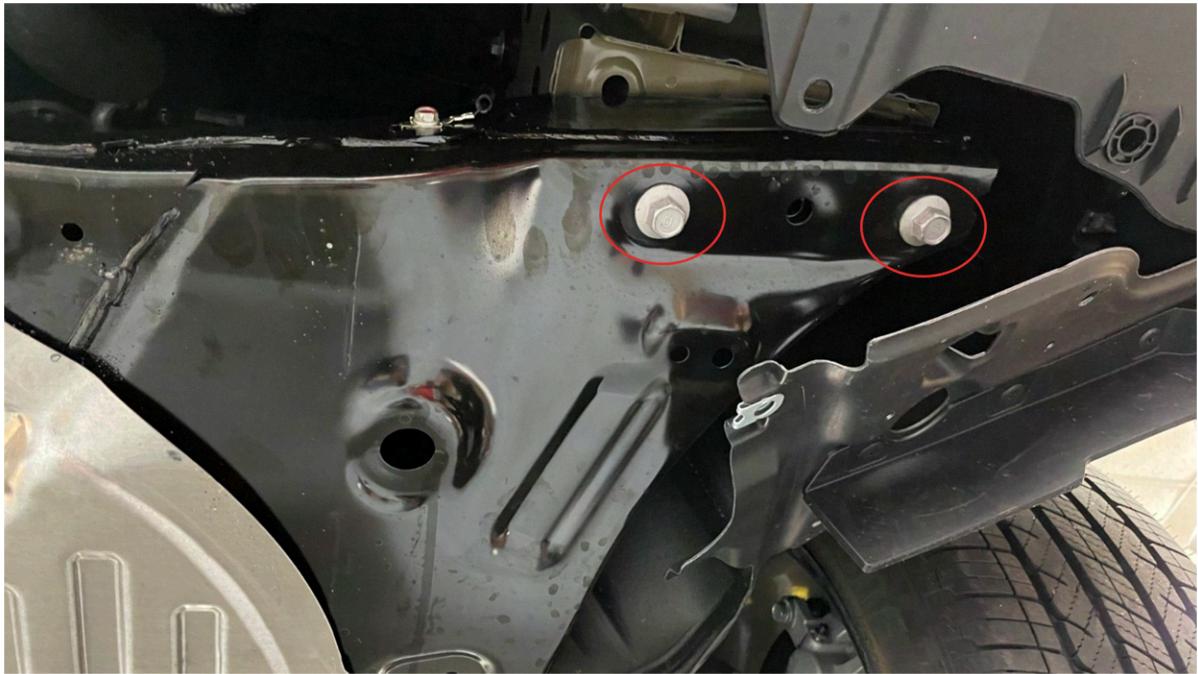

Step2: Mount the Bracket (B) onto the car, using the original car bolts to fix it.

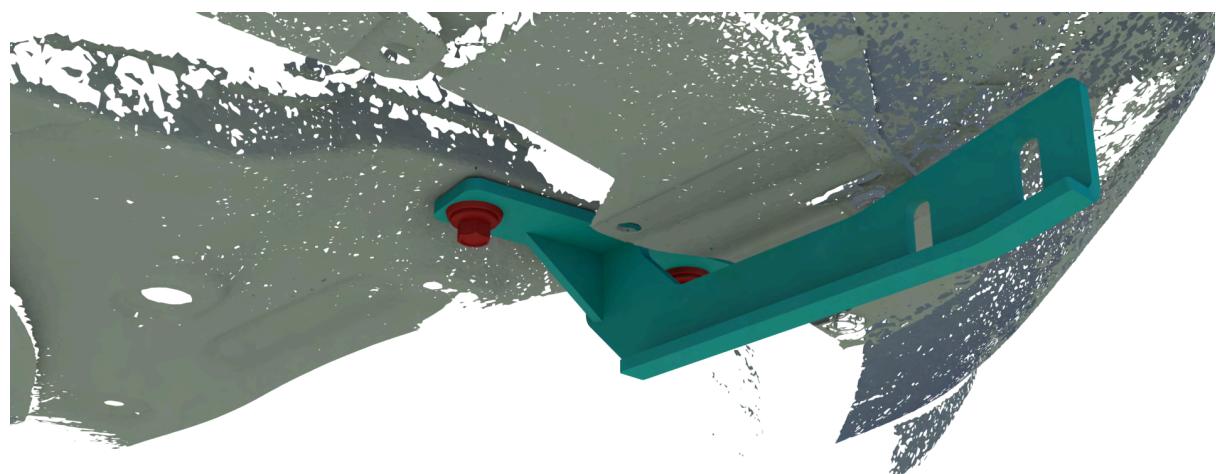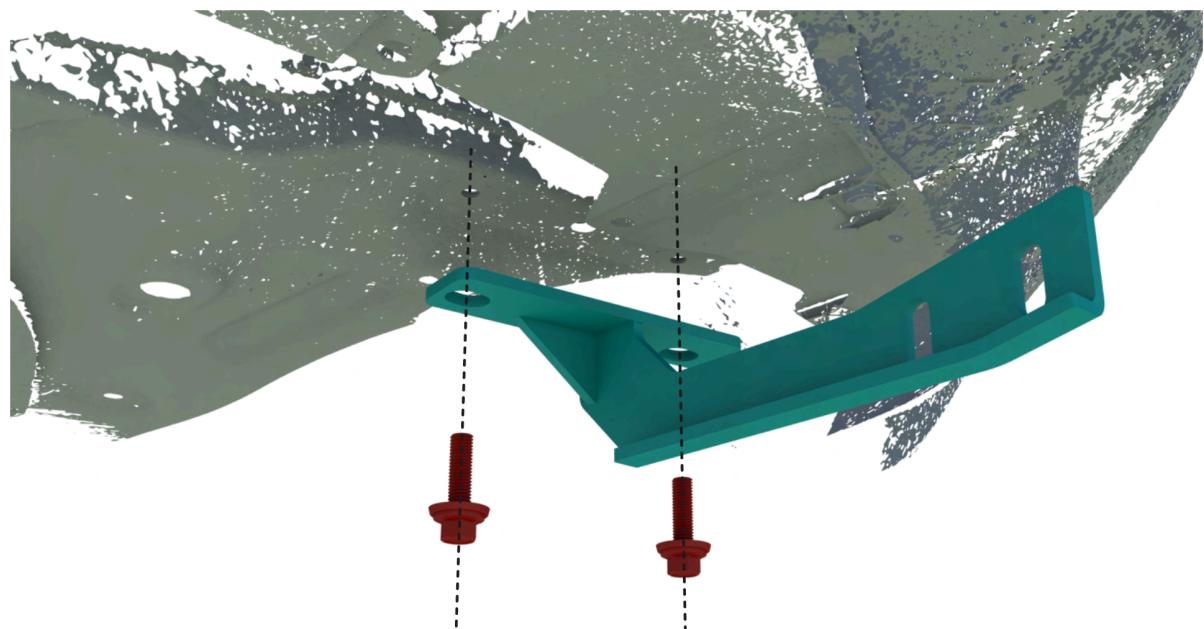


Step3:Mount Adapter Bracket (C) onto the Bracket (B), use Screws (D/E/F/G) to fix them.

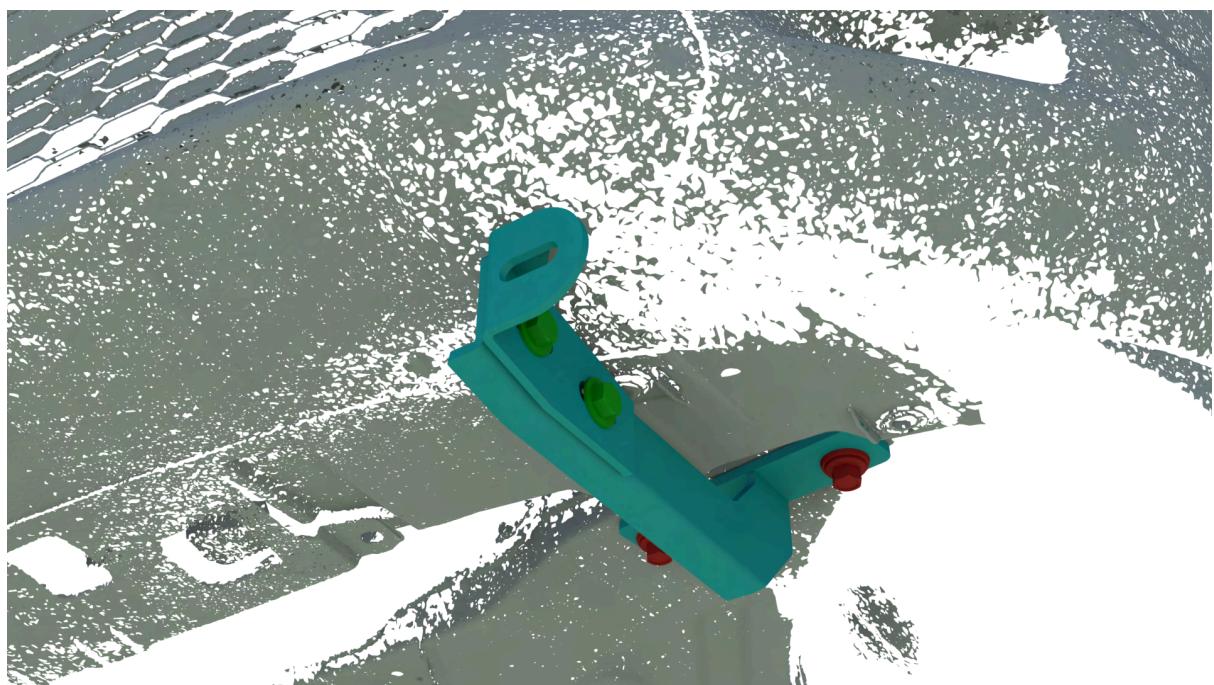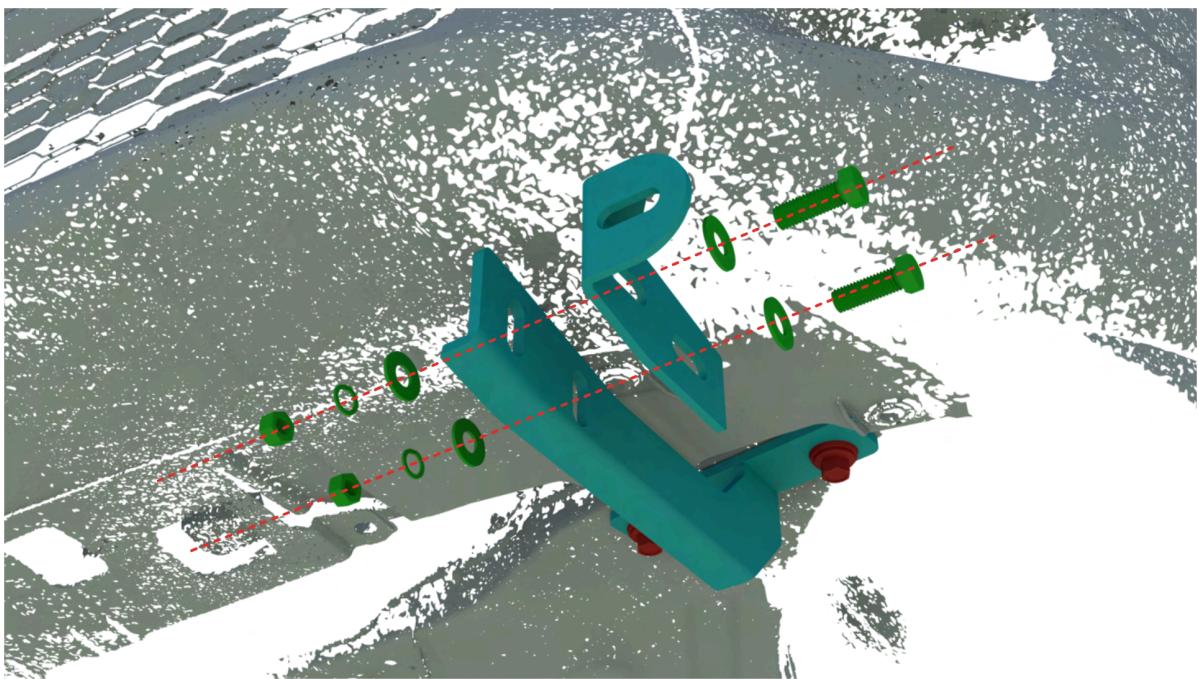

Step4: Bumper Guard (A) installation with screws (D/F/G).

(Before installing Bumper Guard (A), use the same method to mount brackets for Passenger Side of the car.)

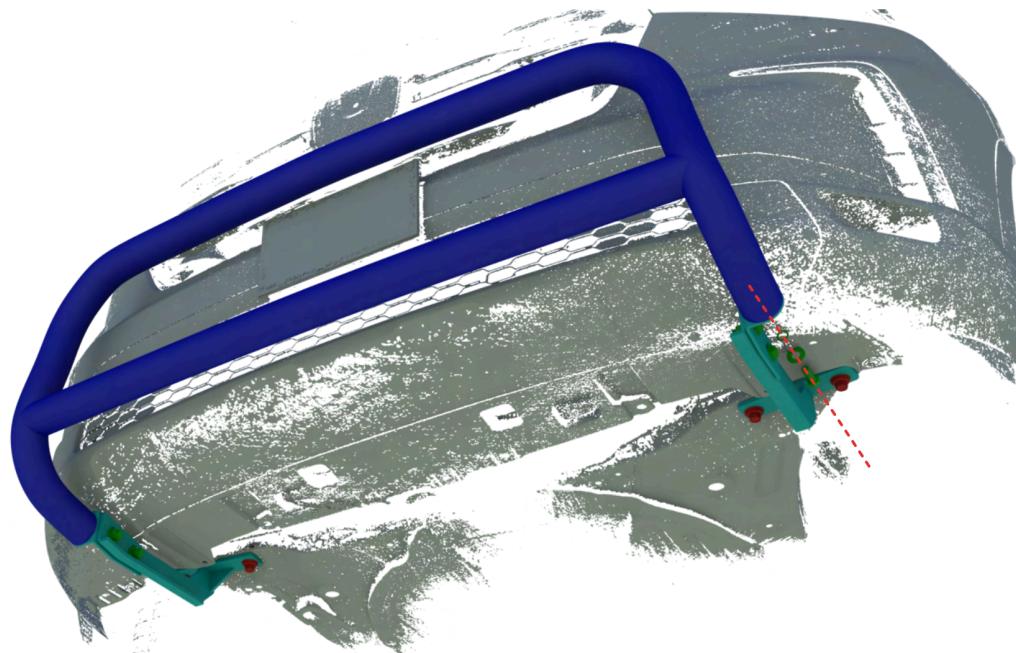

Final showing.

