



HD23-RGR-M16026

Installation Instruction

Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.

Attentions

- The following symbols are used in this installation instruction.



Caution

Relevant matters must be obeyed for safety.

Non-compliance may result in injury or other accidents.

Please read carefully and obey strictly.



Note

Relevant matters must be obeyed for the smooth installation and use.

- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive that we are not responsible for any consequences arising from the installation not according to our installation instruction.

● Product Composition

*Please confirm if it is missing.

1. Mount Bracket (2 piece Left and Right)



2. M12X40 Bolts (2 pieces)



3. M12 Flat Washer (2 pieces)



4. M12 Lock Washer (2 pieces)



● Attenions

- The labels of fitting procedure inside the thick wireframe is particularly important. Pay attention to them in the actual installation.
- Pay attention to safety during installation.

INSTRUCTIONS

1. Remove the plastic skirt

Remove 10 x screws (use a 8mm socket or spanner)

Note: Eight screws have a 5mm thread & two have a 6mm thread



2. Remove the sump guard

Remove 4 x bolts (use a 15mm socket or spanner)

Note: The back bolts do not need to be fully removed



3. Install passenger side bracket


From underside of vehicle, remove the two bolts holding the driver factory tow hook, then remove tow hook from vehicle. Save hardware for later use.


(Figure 3)



4. Locate Passenger Side Mounting Bracket and loosely attach it with factory tow hook(**Figure 4**) to vehicle by using the factory bolts removed in step three (**Figure 3**). Repeat this step for Driver Side Mounting Bracket.

NOTE: This Grille Guard is compatible with the factory tow hooks.

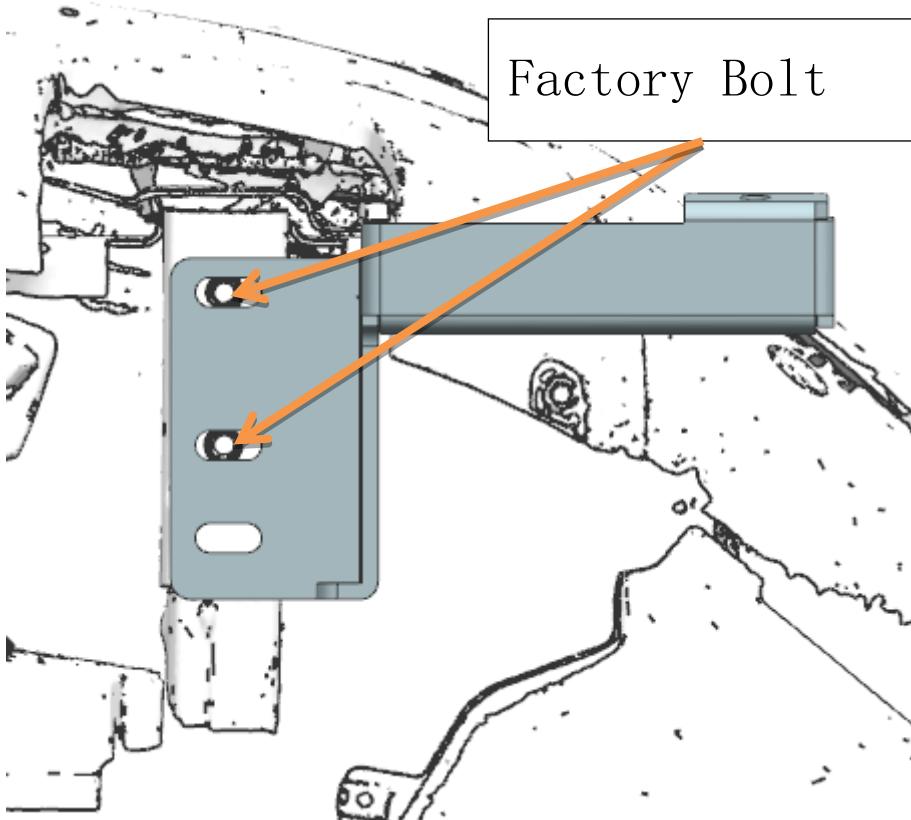


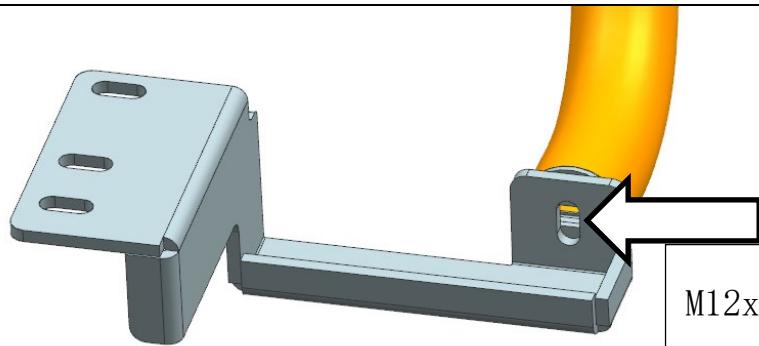

M12x40 Hex Bolt

M12 Lock washer

M12 Flat washer

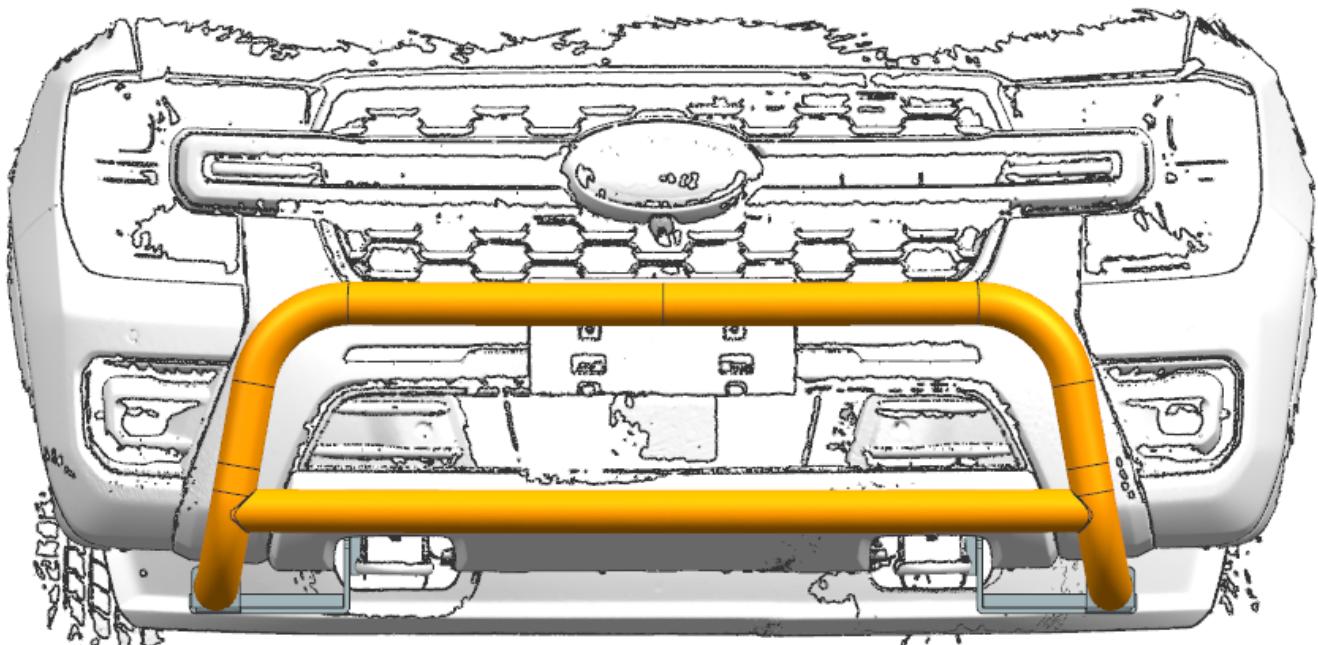

TIPS:

= Routine Maintenance =

1) Please use neutral detergent to wet the soft cloth or suede and so on, then clean our product.

Note

- Do not use any hard objects such as brushes. Otherwise, it will cause surface scratches.
- Please protect the product from gasoline, light fuel, fuel oil, brake fuel, engine oil, paint thinner, sulphuric acid(battery liquid), wax remover, etc. Otherwise, it will cause product discoloration and dyeing. In case product come into contact with above objects, please use neutral detergent to wet the soft cloth or suede and so on, then clean our product and wash it with water quickly.